

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "A" THRU "AIR"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
ATB	OV	(AUTO) TRANSMISSION (BENCH)	4WCR		4 WHLS COMPLETE R&R PADS-SHOES & TURN	ACBA1	RR	A-C COMPRESSOR BELTS
1S	OV	10 SPEED TRANSMISSION (BENCH)	4WC		4 WHLS COMPLETE W-OH CALIPERS & CYLS	ACCA	RR	A-C COMPRESSOR CLUTCH
1M		10,000 MILE SERVICE	4WCW		4 WHLS COMPLETE W-R&R CALIPERS & CYLS	ACMB	RR	A-C COMPRESSOR MOUNT BRACKETS
1MS1		100,000 MILE SERVICE	40W		40W MOTOR OIL	AOK	RR	A-C COMPRESSOR OVERHAUL KIT
1MS11		105,000 MILE SERVICE	4M		45,000 MILE SERVICE	ACPA	RR	A-C COMPRESSOR PULLEY
O		10W30 MOTOR OIL	5M		5,000 MILE SERVICE	ACRA	RR	A-C COMPRESSOR RELAY
10W40		10W40 MOTOR OIL	5MS		50,000 MILE SERVICE	ACSS	RR	A-C COMPRESSOR SHAFT SEAL
1ST	OV	13 SPEED TRANSMISSION (BENCH)	50W		50W MOTOR OIL	ACA1	RR	A-C CONDENSOR
1STB	OV	14 SPEED TRANSMISSION (BENCH)	F1M	RR	5TH MEMBER	ACAA	RR	A-C CONDENSOR-FAN ASSEMBLY
1STB1	OV	15 SPEED TRANSMISSION (BENCH)	5W20		5W20 MOTOR OIL	ACCM		AC CONTROL MODULE
1MS		15,000 MILE SERVICE	5W30		5W30 MOTOR OIL	ACMA	RR	A-C CONTROL MODULE
1STB11	OV	16 SPEED TRANSMISSION (BENCH)	6		60,000 MILE SERVICE	ACSA	RR	A-C CONTROL SWITCH
1STB112	OV	18 SPEED TRANSMISSION (BENCH)	7S	OV	7 SPEED TRANSMISSION (BENCH)	AEA	RR	A-C EVAPORATOR
2W		2 WHEEL ALIGNMENT CHECK	7M		7,500 MILE SERVICE	AER	RR	A-C EVAPORATOR (REAR)
2S	OV	20 SPEED TRANSMISSION (BENCH)	7MS		75,000 MILE SERVICE	AED	RR	A-C EVAPORATOR DRIER ASSEMBLY
20W50		20W50 MOTOR OIL	8	OV	8 SPEED TRANSMISSION (BENCH)	AET	RR	A-C EXPANSION TUBE
2M		22,500 MILE SERVICE	9S	OV	9 SPEED TRANSMISSION (BENCH)	AEVR	RR	A-C EXPANSION VALVE (REAR)
3M		3,000 MILE SERVICE	9		90,000 MILE SERVICE	AEV	RR	A-C EXPANSION VALVE OR BLOCK
3MS		30,000 MILE SERVICE	99		93-05	ACFK		A-C FLUSH KIT
30W		30W MOTOR OIL	APFA	RR	A.I.R. PUMP FILTER	AHPS	RR	A-C HI PRESSURE SWITCH
3B	RR	3RD BRAKE LIGHT BULB	ADE	RR	AB DIAGNOSTIC ENERGY RESERVE	AHCA	RR	A-C HOSE (COMPRESSOR-CONDENSOR)
4D		4 DISC COMPLETE W-OH CAL & TRN RTRS	APSS		AB PASSENGER SIDE SWITCH	AHCD	RR	A-C HOSE (CONDENSOR - DRIER)
4DC		4 DISC COMPLETE W-R&R CAL & TRN RTRS	ASDDE	RR	AB SENSING & DIAGN ENERGY RESV	AHD	RR	A-C HOSE (DRIER - CAB)
4S	RR	4 SPRING SUSP EQUALIZER BEAM	ASDDM	RR	AB SENSING & DIAGNOSTIC MODULE	AHDE	RR	A-C HOSE (DRIER - EVAPORATOR)
4SS	RR	4 SPRING SUSP EQUALIZER BRACKET	ASCA1	RR	AB SENSOR(PASSENGER COMPARTMENT)	AHE	RR	A-C HOSE (EVAPORATOR-COMPRESSOR)
4SSE	RR	4 SPRING SUSP EQUALIZER BUSHING	AHH	RR	A-C - HEATER CONTROL UNIT	AHF	RR	A-C HOSE FITTING W-O RING
4SSS	RR	4 SPRING SUSP SPRING ASSEMBLY	ABA1	RR	A-C BELT	AHO	RR	A-C HOSE O RINGS
4WA		4 WHEEL ALIGN & BALANCE	ACCSA	RR	A-C CLUTCH CYCLING SWITCH	ALBRR	RR	A-C LINES (BOTH - REAR)
4W		4 WHEEL ALIGNMENT CHECK	CLR	RR	A-C CLUTCH RELAY	ACLC		A-C LOW PRESSURE CUTOFF SWITCH

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
ALPH	RR	A-C LOW PRESSURE HOSE (REAR)	ABSI	RR	AIR BAG (SIDE IMPACT)	ABL		AIR BRAKE LINE
LPSW		AC LOW PRESSURE SWITCH	ABAS		AIR BAG ARMING SENSOR	ABSA		AIR BRAKE SLACK ADJUSTER
ALPSA	RR	A-C LOW PRESSURE SWITCH	ABCS	RR	AIR BAG CLOCK SPRING	ACBR		AIR CHAMBER
APT		A-C PERFORMANCE TEST	ABCC	RR	AIR BAG CONTACT COIL	ACD		AIR CHAMBER DIAPHRAGM
PFCs		A-C PRESSURE FAN CONTROL SWITCH	ABCM	RR	AIR BAG CONTROL MODULE	ACTS	RR	AIR CHARGE TEMP SENSOR
APSH	RR	A-C PRESSURE SIDE HOSE (REAR)	ABCU		AIR BAG CONTROL UNIT	ACVA	RR	AIR CHECK VALVE
APSA	RR	A-C PROGRAMMER -SERVO	ABDM	RR	AIR BAG DIAGNOSTIC MODULE	ACE	RR	AIR CLEANER ELEMENT
ACPS		A-C PROGRAMMER-SERVO	ABKM		AIR BAG MODULE (KNEE UNIT)	ACF		AIR CLEANER FILTER
ACRK		A-C RETROFIT KIT	ABPS	RR	AIR BAG PASSENGER SIDE SWITCH	ACM	RR	AIR CLEANER MOUNTS
ACSM	RR	A-C SERVO MOTOR ASSEMBLY	ABS		AIR BAG SENSOR	ACLT	RR	AIR CLEANER TEMP SENSOR
SLS	RR	A-C SPRING LOCK SEALS	ABSC	RR	AIR BAG SENSOR (CENTER)	ACVM	RR	AIR CLEANER VACUUM MOTOR
ASDD	RR	A-C SUCTION & DISCHARGE MANIFOLD	ABSFL	RR	AIR BAG SENSOR (FRONT LEFT)	ACMP		AIR COMPRESSOR
ACTC		A-C THERMOSTATIC CONTROL	ABSFR	RR	AIR BAG SENSOR (FRONT RIGHT)	ACBA	RR	AIR COMPRESSOR BRACKET
ACAB	RR	ACCELERATOR CABLE	ABSF	RR	AIR BAG SENSOR (FRONT)	ACB		AIR CONDITIONER BELT
ACPU	RR	ACCELERATOR PUMP	ABSP		AIR BAG SENSOR (PASSENGER)	HPH		AIR CONDITIONER HIGH SIDE HOSE
ABA12	RR	ACCESSORY BRACKET	ABSR		AIR BAG SENSOR (REAR SIDE)	ACH		AIR CONDITIONER HOSE
ADP	RR	ACCESSORY DRIVE PULLEY	ABSRA	RR	AIR BAG SENSOR (REAR)	ACI		AIR CONDITIONER IS NOT COOLING
ADSA	RR	ACCESSORY DRIVE SEAL	ABSS		AIR BAG SENSOR (SIDE)	LPH		AIR CONDITIONER LOW SIDE HOSE
ACC		ACCUMULATOR	ABSSA	RR	AIR BAG SENSOR(REAR SIDE)	CON		AIR CONDITIONING CONDENSOR
ACCP		ACCUMULATOR PISTON	ABSA1	RR	AIR BAG SENSOR(SIDE)	ACSL		AIR CONDITIONING SPRING LOCK SEAL
APO	RR	ACCUMULATOR PISTON OR SPRING	ABT	CA	AIR BELT & TEST SYSTEM	ACS	RR	AIR CONTROL SENSOR
ACCS		ACCUMULATOR SPRING	ABAM	RR	AIR BLOCK ASSY MANIFOLD	ACV	RR	AIR CONTROL VALVE
ARD	RR	ACCUMULATOR-RECEIVER DRIER	ABAMA	RR	AIR BLOCK ASSY MANIFOLD(BOTH)	ADV	RR	AIR DIVERTER VALVE
AW	RR	ACTUATOR WASTE GATE	ABA		AIR BRAKE ACTUATOR	ADM		AIR DOOR MOTOR
AIRB		AIR BAG	ABAC		AIR BRAKE AIR CHAMBER	ADVA	RR	AIR DRAIN VALVE
ABDS	RR	AIR BAG (DRIVERS SIDE)	ABC	RR	AIR BRAKE COMPRESSOR	ADA	RR	AIR DRIER
ABFS		AIR BAG (FRONT SIDE)	ABCB	RR	AIR BRAKE COMPRESSOR BELT	AFFH		AIR FLEX HOSE (FRONT DROP)
ABKMA	RR	AIR BAG (KNEE MODULE)	ABCV	RR	AIR BRAKE CONTROL VALVE	AFHL		AIR FLEX HOSE (LESS THAN 15')
ABP	RR	AIR BAG (PASSENGER SIDE)	ABD		AIR BRAKE DIAPHRAGM	AFHLT		AIR FLEX HOSE (LONGER THAN 15')

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL OV = OVERHAUL
AL = ALIGN AI = ACCESS/INSPECT
PR = PAINTLESS/REPAIR

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “AIR” THRU “BODY”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
AFHR		AIR FLEX HOSE (REAR DROP)	ASD		AIR SUSPENSION DRYER ASSEMBLY	AMO	RR	ANTENNA (MAST ONLY)
AFH		AIR FLEX HOSE (SUPPLY TO INTENSIFIER)	ASM	RR	AIR SUSPENSION MODULE	ABFV		ANTI-BACK FIRE VALVE
AFM	CA	AIR FLOW METER	ASSA		AIR SUSPENSION SWITCH ASSEMBLY	ADS	RR	ANTI-DIESELING SOLENOID
AFA1	RR	AIR FLOWMETER	ASSAA	RR	AIR SUSPENSION SWITCH ASSY	AF		ANTI-FREEZE(PER GALLON)
AG	RR	AIR GOVERNOR	ATAA	RR	AIR TANK ASSEMBLY	ALC	RR	ANTI-LOCK ACCUMULATOR
AH	RR	AIR HORN	ATBA	RR	AIR TANK BRACKET	ALBB		ANTI-LOCK BRAKE BOOSTER
AIT	RR	AIR INJECTION TUBE	ATS		AIR TEMPERATURE SENSOR	ABU	RR	ANTI-LOCK BRAKE UNIT ASSY
AIB	RR	AIR INTAKE BELLOWES	ATAH	RR	AIR TO AIR HEAT EXCHANGER	ABFL	RR	ANTI-LOCK BRK FLUID LEVEL SENSOR
AITB	RR	AIR INTAKE THROTTLE BODY	ATT		ALIGNMENT - TANDEM	ALCR	RR	ANTI-LOCK CONTROL RELAY
AITA	RR	AIR INTAKE TUBE	A2		ALIGNMENT (2WHL) & BALANCE (4 WHL)	ALCU	RR	ANTI-LOCK CONTROL UNIT
AL		AIR LINE	A4		ALIGNMENT (4WHL) & BALANCE (4 WHL)	ACU	RR	ANTI-LOCK CONTROL UNIT DXG
ALTT	RR	AIR LINES (TRACTOR TO TRAILER)	AS		ALIGNMENT ADJUSTMENT SHIM	ACUTA	RR	ANTI-LOCK CONTROL UNIT TK2
APG	RR	AIR PRESSURE GAUGE (DASH UNIT)	ACCT		ALIGNMENT CHECK - TANDEM	ACUT	RR	ANTI-LOCK CONTROL UNIT TKQ
APRA	RR	AIR PRESSURE REGULATOR	AE	RR	ALIGNMENT ECCENTRIC	ALFS		ANTI-LOCK FLUID LEVEL SENSOR
AP	RR	AIR PUMP	ALT	RR	ALTERNATOR	AFW	RR	ANTI-LOCK FRONT WHEEL SENSOR
APB	RR	AIR PUMP BELT	AOO	RR	ALTERNATOR & OVERHAUL	AFO	RR	ANTI-LOCK FUSES OR RELAY
APBR	RR	AIR PUMP BRACKET	ALTB		ALTERNATOR BEARINGS	AHB	RR	ANTI-LOCK HYDRAULIC BOOSTER ASSY
APCV	RR	AIR PUMP CHECK VALVE	AB	RR	ALTERNATOR BELT	AHC	RR	ANTI-LOCK HYDRAULIC CONTROL UNIT
APF		AIR PUMP FILTER	ALB	RR	ALTERNATOR BRACKET	ALLA	RR	ANTI-LOCK LATERAL ACCELEROMETER
ASVA	RR	AIR SOLENOID VALVE	ALBR		ALTERNATOR BRUSHES	ALMO	RR	ANTI-LOCK MODULATOR
ASV		AIR SPRING VALVE	ALTP		ALTERNATOR PULLEY	ALM	RR	ANTI-LOCK MODULE
ASCS		AIR SUCT CNTRL SOLENOID	ALBS		ALTERNATOR STATOR	ALPS	RR	ANTI-LOCK PRESSURE SWITCH
ASCV		AIR SUCT CNTRL VALVE	ALTS	RR	ALTITUDE SOLENOID	ALPV	RR	ANTI-LOCK PROPORTIONING VALVE
ASCVO	RR	AIR SUCT CNTRL VALVE OR SOLENOID	ATSA	RR	AMBIENT TEMP SENSOR	ALPM	RR	ANTI-LOCK PUMP MOTOR
ASA	RR	AIR SUSPENSION AIR COMPRESSOR	AMTS		AMBIENT TEMPERATURE SENSOR	ALPR		ANTI-LOCK PUSH ROD ASSEMBLY
ASC		AIR SUSPENSION COMPRESSOR	AMM		AMMETER	APR	RR	ANTI-LOCK PUSH ROD ASSY
ASCR		AIR SUSPENSION COMPRESSOR RELAY	AISA1		ANALYZE IGNITION SYSTEM	ARW	RR	ANTI-LOCK REAR WHEEL SENSOR
ASCVA	RR	AIR SUSPENSION CONTROL VALVE	ALBU		ANIT-LOCK BRAKE UNIT	ASCF	RR	ANTI-LOCK SENSOR CABLE FRONT
ASDA	RR	AIR SUSPENSION DRIER ASSY	ANT	RR	ANTENNA	ASCA	RR	ANTI-LOCK SENSOR CABLE REAR

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
ASCA	CA	ANTI-LOCK SENSOR CLEARANCE	ASA1	RR	AUXILIARY SHAFT	BCB	RR	BATTERY CABLE(NEGATIVE)
ALSV	RR	ANTI-LOCK SOLENOID VALVE	ASBSA	RR	AUXILIARY SPRINGS (BOTH SIDES)	BCB1	RR	BATTERY CABLE(POSITIVE)
ASSF	RR	ANTI-LOCK SPEED SENSOR FRONT	AVB		AUXILIARY VALVE BODY	BDF		BATTERY DISPOSAL FEE
ASSR	RR	ANTI-LOCK SPEED SENSOR REAR	AV		AUXILIARY VALVES	BHD		BATTERY HOLD DOWN
ALS	RR	ANTI-LOCK SWITCH	AES		AXLE ENGAGEMENT SWITCH	BI		BATTERY IS LOW, NO LIGHTS
AVC	RR	ANTI-LOCK VALVE CABLE FRONT	AXG		AXLE GREASE	BTX		BATTERY RECLAMATION FEE
AVCR	RR	ANTI-LOCK VALVE CABLE REAR	ALW		AXLE LOCK WASHER	BTE		BATTERY TERMINAL END
AVR	RR	ANTI-LOCK VALVE REAR	ASB	RR	AXLE SHAFT & BOTH CV BOOTS	BTEB	RR	BATTERY TERMINAL ENDS
AWL	RR	ANTI-LOCK WARNING LIGHT BULB	ASCC	RR	AXLE SHAFT & CV JOINT	BEA		BEARING
ALWS		ANTI-LOCK WHEEL SENSOR	ASBS	RR	AXLE SHAFT (BOTH SIDES)	BLT		BELT
ANSC		ANTI-SEIZE COMPOUND	ASI	RR	AXLE SHAFT INNER CV BOOT	BLTD		BELT DRESSING
ASA12	RR	ARMING SENSOR	ASO	RR	AXLE SHAFT OUTER CV BOOT	BT	RR	BELT TENSIONER
AST	RR	ASPIRATOR TUBE	BULS		BACK UP LIGHT SWITCH	BB1	RR	BELTS
ASTV	RR	ASPIRATOR VALVE	BAPT	RR	BACKPRESSURE TRANSDUCER	BHH	RR	BELTS & HOSES
AME	RR	AUTO MOISTURE EJECTOR HOSES	BLSB	RR	BACKUP LIGHT SWITCH	BBSM		BLEED BRAKE SYSTEM (MANUAL)
ASDMM	RR	AUTO SHUT DOWN (MOTION) MODULE	B2		BALANCE 2 TIRES	BBSP		BLEED BRAKE SYSTEM (PRESSURE)
ASDM		AUTO SHUT DOWN MODULE	B4T		BALANCE 4 TIRES	BHC		BLEED HYDRAULIC CLUTCH
AC	RR	AUTOMATIC CHOKE	BASA	RR	BALANCE SHAFT ASSEMBLY	BDA	RR	BLEND DOOR ACTUATOR
ACOK		AUTOMATIC CHOKE	BSB	RR	BALANCE SHAFT BELT	BDCA		BLEND DOOR CONTROL ASSEMBLY
ACDA	RR	AUTOMATIC CHOKE DIAPHRAGM	BTB		BALANCE TIRE	BTF		BLOCK TESTER FLUID
AISA	RR	AUTOMATIC IDLE SPEED ASSY	BJ		BALL JOINT	BM	RR	BLOWER MOTOR
ASR	RR	AUTOMATIC SHUTDOWN RELAY	BJB	RR	BALL JOINTS (BOTH - 1 SIDE)	BMRB	RR	BLOWER MOTOR (REAR)
ATAU	RR	AUTOMATIC TIMING ADVANCE UNIT	BAL	RR	BALLAST RESISTOR	BMR	RR	BLOWER MOTOR RELAY
ATF		AUTOMATIC TRANSMISSION FLUID	BANK		BANNER KIT	BMSR	RR	BLOWER MOTOR RESISTOR
AT		AUTOMATIC TRANSMISSION(REBUILT)	BPS		BAROMETRIC PRESSURE SENSOR	BMS	RR	BLOWER MOTOR SWITCH
AVBA	RR	AUX VALVE BODY	BARS	RR	BAROMETRIC SENSOR	BMSR	RR	BLOWER MOTOR SWITCH (REAR)
AAR		AUXILARY AIR REGULATOR	BB12	RR	BATTERIES	BCM		BODY CONTROL MODULE
AFF		AUXILARY FUEL FILTER	BAT	RR	BATTERY	BCMB	RR	BODY CONTROL MODULE (BCM)
AFA	RR	AUXILIARY FAN	BATC		BATTERY CABLE	BWH	RR	BODY WIRING HARNESS

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTLESS/REPAIR
OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “BOLT” THRU “CLUTCH”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
B		BOLT	BLR		BRAKE LINE (REAR TEE TO STAND OFF)	CASC1	RR	CAB AIR SPRINGS
BRAC		BRACKET	BLTT		BRAKE LINE (TEE TO FRAME)	CBM	RR	CAB BLOWER MOTOR
BAHO		BRAIDED AIR HOSE (OVER 15')	BLTW		BRAKE LINE (TEES WITH BRACKET)	CEC	RR	CAB EVAPORATOR CORE
BAHU		BRAIDED AIR HOSE (UNDER 15')	BLM	RR	BRAKE LINES (MASTER TO SLAVE)	CHCC	RR	CAB HEATER CORE
BAH		BRAKE AIR HOSES	BP		BRAKE PADS	CHH	RR	CAB HEATER HOSES
BBS		BRAKE BLEEDER SCREW	BPM		BRAKE PRESSURE MODULATOR	CLM	RR	CAB LOWER MOUNTS
BB		BRAKE BOOSTER	BPMV	RR	BRAKE PRESSURE MODULATOR VALVE	CSC1	RR	CAB SHOCKS
BBCV		BRAKE BOOSTER CHECK VALVE	BR		BRAKE ROTOR	CUM	RR	CAB UPPER MOUNTS
BBV	RR	BRAKE BOOSTER VACUUM PUMP	BSA		BRAKE SELF ADJUSTERS	CAF	RR	CABIN AIR FILTER
BC		BRAKE CABLE	BSS	RR	BRAKE SENSOR SWITCH	CAB		CABLE
CALL		BRAKE CALIPER (LEFT)	BS		BRAKE SHOES	CK		CALIPER KIT
CALR		BRAKE CALIPER (RIGHT)	BSK		BRAKE SPRING KIT	CBK		CAMBER BUSHING KIT
CALP		BRAKE CALIPER PISTON	BVH		BRAKE VACUUM HOSE	CBKF	RI	CAMBER BUSHING KIT (FRONT)
BK		BRAKE CLEAN	B4	AI	BRAKES (4 WHEELS)	CSK	RI	CAMBER SERVICE KIT
BCLP		BRAKE CLIPS	BAM		BRAKES ARE MAKING NOISE	CSKR	RI	CAMBER SERVICE KIT (REAR)
BCV		BRAKE COMBINATION VALVE	BAO		BRAKES ARE OKAY	CTAK		CAMBER TOE ADJUSTMENT KIT
BD		BRAKE DRUM	BN		BRAKES NEED ATTENTION SOON	CAK	RI	CAMBER-TOE ADJUSTMENT KITS
BDH		BRAKE DRUM HUB	BCVB	RR	BRAKESAVER CONTROL VALVE	CAM	RR	CAMSHAFT
BF		BRAKE FLUID (PER PINT)	BHRR	RR	BRAKESAVER HOUSING & ROTOR	CAMB	RR	CAMSHAFT BEARINGS
BFQ		BRAKE FLUID (PER QUART)	BTB1	RR	BREATHER TUBE	CAMG	RR	CAMSHAFT COVER GASKET
BHWK		BRAKE HARDWARE KIT	BUSH		BUSHING	CAG		CAMSHAFT GEAR
BH		BRAKE HOSE	BPT		BY PASS TUBE	COS	RR	CAMSHAFT OIL SEAL
BHF	RR	BRAKE HOSES (FRONT)	BPH		BY-PASS HOSE	COBR	RR	CAMSHAFT OIL SEAL (REAR)
BHR	RR	BRAKE HOSES (REAR)	BHO	RR	BY-PASS HOSE OR TUBE	CAPS	RR	CAMSHAFT POSITION SENSOR
BLS	RR	BRAKE LIGHT SWITCH	CCBR	RR	C CONTROL BRAKE RELEASE SWITCH	CS		CAMSHAFT SEAL
BLA		BRAKE LIGHTS AREN'T WORKING	CCBA	RR	C CONTROL BUTTERFLY ANGLE SWITCH	CAMS	RR	CAMSHAFT SUPPORT
BLIT		BRAKE LINE (INTENSIFIER TO REAR)	CCCRS	RR	C CONTROL CLUTCH RELEASE SWITCH	CTG	RR	CAMSHAFT TOWER GASKET
BLI		BRAKE LINE (INTENSIFIER TO TEE)	CCVB	RR	C CONTROL VACUUM BLEED SWITCH	CNSW	RR	CANCEL SWITCH
BL	RR	BRAKE LINE (PER FT.)	CAHC	RR	CAB A-C HOSE	CANS	RR	CANISTER PURGE SOLENOID

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
C	RR	CARBURETOR	CAFC		CHECK ALL FLUIDS	CAA		CLEAN & ADJUST BRAKES (2 WHEELS)
CAH		CARBURETOR AIR HORN	CATC		CHECK ALL TIRES	CAAB		CLEAN & ADJUST BRAKES (4 WHEELS)
CAO	RR	CARBURETOR AND OVERHAUL	CCSSS		CHECK CHGNG SYS & SERVICE BATTERIES	CAAW		CLEAN & ADJUST WASHER NOZZLES
CBP		CARBURETOR BASE PLATE	CEL		CHECK ENGINE LIGHT IS ON	CBT		CLEAN BATTERY TERMINAL ENDS
CC		CARBURETOR CLEANER	CEM		CHECK ENGINE MOUNTS	CCH		CLEAN CYLINDER HEAD
CG		CARBURETOR GASKET	CFN		CHECK FOR NOISE IN FRONT END	CE		CLEAN ENGINE BLOCK (IN VEHICLE)
CIC	CA	CARBURETOR IDLE	CNI		CHECK NOISE IN AIR CONDITIONER	CFI		CLEAN FUEL INJECTORS
COK		CARBURETOR OVERHAUL KIT	COB4		CHECK OUT BRAKES (4 WHEELS)	CFL		CLEAN FUEL LINES
CASW		CASTER WASHER	COB		CHECK OUT BRAKES (FRONT)	COE		CLEAN OUT EVAPORATOR DRAIN HOSE
CWF	RI	CASTER WASHERS (FRONT)	COFL		CHECK OUT FLUID LEAKS	CPSC		CLEAN PCV SYSTEM
CCC	RI	CASTER-CAMBER CAM	COFE		CHECK OUT FRONT END (INSPECTION)	CTB		CLEAN THROTTLE BODY & PLATE
CCK	RI	CASTER-CAMBER KIT	COOL		CHECK OUT OIL LEAKS	CTP		CLEAN THROTTLE PLATE ASSEMBLY
CAT	RR	CATALYTIC CONVERTER	COSS		CHECK OUT SHOCKS & STRUTS	COL		CLEANING OF LININGS
CDL	RR	CENTER (DRAG) LINK	COTN		CHECK OUT TICKING NOISE UNDER VEHICLE	CLOK	RR	CLOCK
CL		CENTER LINK	COT		CHECK OUT TRANSMISSION LEAK	CBPA	CA	CLUTCH & BRAKE PEDAL ASSEMBLY
CSB	RR	CENTER SUPPORT BEARING	COVP		CHECK OUT VEHICLE (PREPURCHASE)	CBB	RR	CLUTCH & BRAKE PEDAL ASSY
CTH	RR	CENTRAL TURBINE HOUSING	COV		CHECK OUT VEHICLE (TRIP CHECK)	CLC	RR	CLUTCH CABLE
TENS		CHAIN TENSIONER	CSN		CHECK SCRAPING NOISE UNDER VEHICLE	CLCA	RR	CLUTCH CABLE ADJUSTER
COF		CHANGE OIL & FILTER, TOP OFF FLUIDS	CSH		CHECK STANDING HEIGHT	CD		CLUTCH DISC
CRA	RR	CHANGE REAR AXLE FLUID & COVER	CTN		CHECK THUMPING NOISE FROM REAR	CLF		CLUTCH FORK
CSTW		CHANGE SPARE TIRE - WHEEL TO WHEEL	CTOC		CHECK TRANSMISSION OPERATION	CLK		CLUTCH KIT
CTC1		CHANGE TIRE	CV		CHECK VALVE	CMC	RR	CLUTCH MASTER CYLINDER
CTW	RR	CHANGE TIRE (WITH SPARE)	CHO		CHOKE	CMSA	RR	CLUTCH MASTER-SLAVE ASSEMBLY
CTCF		CHANGE TRANSFER CASE FLUID	CHT	RR	CHOKE HEAT TUBE	CPA	RR	CLUTCH PEDAL ASSEMBLY
CTF		CHANGE TRANSMISSION FLUID & FILTER	CPO	RR	CHOKE PULL OFF	CPB	RR	CLUTCH PILOT BEARING
CWF		CHANGE WHEEL OVER ON TIRE MACHINE	CHTM	RR	CHOKE THERMOSTAT	CSS	RR	CLUTCH SAFETY SWITCH
CWOO		CHANGE WHEEL OVER ON TIRE MACHINE(MAG)	CLA		CIGARETTE LIGHTER ASSEMBLY	CSET		CLUTCH SET (PPLATE, TO BEARING & DISC)
CAC	RR	CHARGE AIR COOLER ASSEMBLY	CLAC	RR	CIGARETTE LIGHTER ASSY	CSC	RR	CLUTCH SLAVE CYLINDER
CHTS	RR	CHARGE TEMP SENSOR	CIRB		CIRCUIT BREAKER	CLSW		CLUTCH SWITCH

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTLESS/REPAIR

OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “CLUTCH” THRU “EGR”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
CPT	RR	CLUTCH, P.Plate & T.O.BEARING	CF		COOLANT FILTER	CRKG		CRANKSHAFT GEAR
COIL		COIL SPRINGS	CHC	RR	COOLANT HEADER COVER	CRKK		CRANKSHAFT KIT
CW		COIL WIRE	COOH		COOLANT HOSE	CPS	RR	CRANKSHAFT POSITION SENSOR
CESC	CA	COLD ENRICHMENT SYSTEM	CHOC	RR	COOLANT HOSE (ONE)	CP		CRANKSHAFT PULLEY
CSI	RR	COLD START INJECTOR	CHA	RR	COOLANT HOSES (ALL)	CRKP		CRANKSHAFT PULLEY
CSV		COLD START VALVE	CLS	RR	COOLANT LEVEL SENSOR	CSFC	RR	CRANKSHAFT SEAL (FRONT)
CLSB	RR	COLUMN LOWER SHAFT BEARING	CRB		COOLANT RECOVERY BOTTLE	COP		CROSS OVER PIPE
CST		COLUMN SHIFT TUBE	CRH	RR	COOLANT RECOVERY HOSE	CRC	RR	CROSSMEMBER (REAR)
CSA	RR	COMBINATION SWITCH ASSY	CRR	RR	COOLANT RECOVERY RESERVOIR	CMBR	RR	CROSSMEMBER ASSEMBLY
CVC	RR	COMBINATION VALVE	CTOS		COOLANT TEMP OVERRIDE SWITCH	CMBB		CROSSMEMBER BUSHINGS
CTCS		COMBUSTION TEST COOLING SYSTEM	CTSC1	RR	COOLANT TEMP SENSOR	CPC	RR	CROSSOVER PIPE
CES	RR	COMPLETE EXHAUST SYSTEM	CTSC	RR	COOLANT TEMP SWITCH	CA	RR	CROSSTUBE ARM
CCC1		COMPRESSION CHECK	CTS		COOLANT TEMPERATURE SENSOR	CTA	RR	CROSSTUBE ASSEMBLY
COM		COMPRESSOR	CTT	RR	COOLANT TRANSFER TUBE	CCRS		CRUISE CONTROL BRK RELEASE SWITCH
CAOC	RR	COMPRESSOR AND OVERHAUL	CT	RR	COOLANT TUBE	CCBS		CRUISE CONTROL BUTTERFLY SWITCH
COMC		COMPRESSOR CLUTCH	CVVS	RR	COOLANT VACUUM VALVE SWITCH	CCAB	RR	CRUISE CONTROL CABLE
COMH	RR	COMPRESSOR HOUSING	CSFT		COOLING SYS FLUSH TEE	CCCR		CRUISE CONTROL CLUTCH RELEASE SWITCH
COMP		COMPRESSOR PULLEY	CSIL		COOLING SYSTEM IS LEAKING	CCHC	RR	CRUISE CONTROL HARNESS
COMS		COMPRESSOR SHAFT SEAL	CORE		CORE CHARGE	CCR	RR	CRUISE CONTROL REGULATOR
CCF	RR	CONDENSOR COOLING FAN	CNF		COULD NOT FIND ANY SERIOUS DAMAGE	CCS	RR	CRUISE CONTROL SERVO
CR		CONNECTING ROD	CSW	RR	COURTESY LIGHT SWITCH	CCSS	RR	CRUISE CONTROL SPEED SENSOR
CROB		CONNECTING ROD BEARING	CASC	RR	CRANK ANGLE SENSOR	CCSW	RR	CRUISE CONTROL SWITCH
CB		CONTROL BOX	CCB		CRANKCASE BREATHER FILTER	CCU	RR	CRUISE CONTROL UNIT
CM		CONTROL MODULE	CVF	RR	CRANKCASE VENT FILTER	CCVS		CRUISE CONTROL VACUUM BLEED SWITCH
CU	RR	CONTROL UNIT	CRK	RR	CRANKSHAFT	CCWH		CRUISE CONTROL WIRING HARNESS
CTC	RR	CONVERTIBLE TOP CABLE	CRKD		CRANKSHAFT DAMPER	CVJ		CV JOINT
CTM	RR	CONVERTIBLE TOP MOTOR	CDO	RR	CRANKSHAFT DAMPER OR PULLEY	CH		CYLINDER HEAD
CTR	RR	CONVERTIBLE TOP RELAY	CRD	RR	CRANKSHAFT DISC	CHTSC	RR	CYLINDER HEAD TEMP SENSOR
CFM	RR	COOLANT FAN MODULE	CRKS		CRANKSHAFT FRONT SEAL	CHG	RR	CYLINDER HEADS & GRIND VALVES

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
CLD		CYLINDER LEAK DOWN TEST	DR		DIAGNOSE RIDE CONTROL SYSTEM	DISR		DISTRIBUTOR RELUCTOR
DFID		D.O.T. FEDERAL INSPECTION	DTB		DIAGNOSE THROTTLE BODY	DRD	RR	DISTRIBUTOR ROTOR
DLB		DASH LIGHT BULB	DTC		DIAGNOSE TIMING CHAIN OR BELT	DISS		DISTRIBUTOR SHAFT
DLBO	RR	DASH LIGHT BULB (ONE)	DTP		DIAGNOSE TRANSMISSION PROBLEM	DSTA	RR	DISTRIBUTOR STATOR
DLA		DASH LIGHTS AREN'T WORKING	DVD		DIAGNOSE VIBRATION	DH		DOOR HANDLE
DWH	RR	DASH WIRING HARNESS	DWP		DIAGNOSE WIRING PROBLEM	DHB		DOOR HINGE BUSHING
DCD	RR	DASHBOARD (COMPLETE)	DCD1		DIAGNOSTIC CHARGES	DHP		DOOR HINGE PIN
DA		DASHBOARD ASSEMBLY	DER		DIAGNOSTIC ENERGY RESERVE	DHPB	RR	DOOR HINGE PIN & BUSHING
DP	RR	DASHBOT	DPS		DIASSEMBLE PIVOT SHAFT	DLPC	RR	DOOR LOCK CYLINDER
DV	RR	DECELERATION VALVE	DEC		DI-ELECTRIC COMPOUND	DLR	RR	DOOR LOCK RELAY
DETS	RR	DEFONATION SENSOR	DOO	RR	DIFFERENTIAL & O-H	DMIR		DOOR REAR MIRROR
DTT		DIAGNOSE & TEST COMPUTER SYSTEM	DB		DIFFERENTIAL BEARING	DKC	RR	DOWNSHIFT - KICKDOWN CABLE
DAS		DIAGNOSE A-C SYSTEM (ELECTRICAL)	DG		DIFFERENTIAL COVER GASKET	DSS	RR	DOWNSHIFT SOLENOID
DASM		DIAGNOSE A-C SYSTEM (MECHANICAL)	DOSD	RR	DIFFERENTIAL OUTPUT SEAL	DL	RR	DRAG LINK
DAB		DIAGNOSE AIR BAG SYSTEM	DOS	RR	DIFFERENTIAL OUTPUT SHAFT	DF		DRAIN & FILL SYSTEM COOLING SYS
DASS		DIAGNOSE AIR SUSPENSION SYSTEM	DSB	RR	DIFFERENTIAL SIDE BEARINGS	DFFF		DRAIN & FLUSH FUEL TANK (OFF VEHICLE)
DASD		DIAGNOSE ANTI-LOCK SYSTEM	DBD	RR	DIFFERENTIAL-CARRIER BEARINGS	DRR		DRAIN & REFILL FRONT DIFFERENTIAL
DCS		DIAGNOSE COMPUTER SYS & REPLACE SENSOR	DT		DIODE TRIO	DRRM		DRAIN & REFILL MANUAL TRANSMISSION
DCF		DIAGNOSE COOLING FAN SYSTEM	DCH		DISASSEMBLE CYL HEAD(ONE)	DHHC		DRAIN HOSE HOSE CLAMP
DECD		DIAGNOSE ELECTRONIC CARBURETOR	DBQ		DISC BRAKE QUIET	DS	RR	DRIVE SHAFT
DES		DIAGNOSE ELECTRONIC SHIFT SYSTEM	DMVS	RR	DIST MODULATOR VALVE SWITCH	DSF	RR	DRIVE SHAFT FLEX JOINT
DEW		DIAGNOSE EMISSIONS WITH ANALYZER	DVC	RR	DIST VACUUM CONTROL	ECMP	RR	ECM PROM CALIBRATOR
DEP		DIAGNOSE ENGINE PERFORMANCE	D	RR	DISTRIBUTOR	ECMR	RR	ECM-POWER RELAY
DF		DIAGNOSE FOR PULL-DRAG OR LOW PEDAL	DAO	RR	DISTRIBUTOR AND OVERHAUL	ECON	RR	ECONOMIZER VALVE
DFIC		DIAGNOSE FUEL INJECTION & COMPUTER SYS	DISB		DISTRIBUTOR BUSHING	EGRS	RR	EGR CONTROL SOLENOID
DFI		DIAGNOSE FUEL INJECTION SYSTEM	DC	RR	DISTRIBUTOR CAP	ECT	RR	EGR COOLANT TEMP OVERRIDE SWITCH
DHS		DIAGNOSE HARD START CONDITION	DISG		DISTRIBUTOR GEAR	EGRC	RR	EGR COOLER
DN		DIAGNOSE NO START CONDITION	DOR	RR	DISTRIBUTOR O RING	EGRM	RR	EGR MODULATOR
DOF		DIAGNOSE O-D FAILURE TO ENGAGE	DPU		DISTRIBUTOR PICK-UP	EPS	RR	EGR POSITION SENSOR

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTLESS/REPAIR

OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “EGR” THRU “FRONT”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
EGRF	RR	EGR PRESSURE FEEDBACK SENSOR	EBCR	RR	EMERGENCY BRAKE CABLE(ONE REAR)	EMB	RR	ENGINE MOUNTS (BOTH)
EGRT	RR	EGR TUBE	EBCE1	RR	EMERGENCY BRAKE CONTROL	EOGS		ENGINE OVERHAUL GASKET SET
EVE	RR	EGR VALVE	EBH		EMERGENCY BRAKE HARDWARE	EOK		ENGINE OVERHAUL KIT
EWG	RR	ELBOW WASTE GATE	EBL		EMERGENCY BRAKE LEVER	EOE		ENGINE OVERHEATS
EDLS		ELECTRIC DOOR LOCK SOLENOID	EBPA		EMERGENCY BRAKE PEDAL ASSEMBLY	EPE		ENGINE PINGS
EF	RR	ELECTRIC FAN ASSEMBLY	EBRD		EMERGENCY BRAKE RELEASE DIAPHRAGM	ERTS	RR	ENGINE ROOM THERMAL SWITCH
EFM	RR	ELECTRIC FAN MOTOR	EBRM		EMERGENCY BRAKE RELEASE MOTOR	ERO		ENGINE RUNS ON WHEN KEY IS OFF
EFMR	RR	ELECTRIC FAN MOTOR RELAY	EBSS		EMERGENCY BRAKE SHOE SET	ERRE		ENGINE RUNS ROUGH
ERM	RR	ELECTRIC REGULATOR & MOTOR	EBVS	RR	EMERGENCY BRAKE VACUUM SWITCH	ESW		ENGINE STALLS WHEN COLD
ERS	RR	ELECTRIC RETARD SWITCH	ENG	RR	ENGINE	ESWH		ENGINE STALLS WHEN HOT
EVS	RR	ELECTRICAL VACUUM SWITCH	E00	RR	ENGINE & OVERHAUL	ESO		ENGINE STUMBLES ON ACCELERATION
ECM		ELECTRONIC CONTROL MODULE	EI	OV	ENGINE (IN FRAME)	EU		ENGINE USES TOO MUCH OIL
ECR	RR	ELECTRONIC CONTROL RELAY	EAT	RR	ENGINE AND TRANSFER PARTS	EWH	RR	ENGINE WIRING HARNESS
ECU		ELECTRONIC CONTROL UNIT	EBE1		ENGINE BACKFIRES	EWI		ENGINE WON'T IDLE
ED	RR	ELECTRONIC DASH ASSEMBLY	EBO		ENGINE BUCKS OR SURGES	ELL		EVACUATE,RECHARGE & LEAK TEST SYSTEM
EIM	RR	ELECTRONIC IGNITION MODULE	EC		ENGINE CLEANER	ERR		EVACUATE,RECHARGE & RECOVER FREON
IGS		ELECTRONIC IGNITION SENSOR	ECME	RR	ENGINE CONTROL MODULE(ECM)	EL		EVACUATE,RECHARGE LEAK TEST & RECOVER
EPU	RR	ELECTRONIC PICK UP	ECB		ENGINE CRADLE BUSHINGS	EVAC		EVACUATION AND RECHARGE
ESMA	RR	ELECTRONIC SHIFT MOTOR ASSY	ECOB	RR	ENGINE CRADLE OR BUSHINGS	ECC	RR	EVAPORATION CONTROL CANISTER
ESC	RR	ELECTRONIC SPARK CONTROL	EGP		ENGINE GETS POOR FUEL MILEAGE	E		EVAPORATOR
ESPD	RR	ELECTRONIC SPEEDOMETER	EIR		ENGINE IDLES ROUGH	EVAP		EVAPORATOR
EVR	RR	ELECTRONIC VACUUM REGULATOR	EK		ENGINE KNOCKS	EVPS	RR	EVP POSITION SENSOR
EBSL		EMEGENCY BRAKE WARNING LIGHT SWITCH	ELP		ENGINE LACKS POWER	EVOS	RR	EVP SHUT OFF SOLENOID
EBPAE	RR	EMER BRAKE PEDAL ASSY	ELF		ENGINE LEAKS FLUID	EAST	RR	EXHAUST AIR SUPPLY TUBE
EBRME	RR	EMER BRAKE RELEASE MOTOR	EMAS		ENGINE MISSES AT SPEED	EBVE	RR	EXHAUST BRAKE VALVE
EBW	RR	EMER BRAKE WARNING LIGHT SWITCH	EMF	RR	ENGINE MOUNT (FRONT) FWD	EDG		EXHAUST DONUT GASKET
EBC	CA	EMERGENCY BRAKE CABLE	EMOE	RR	ENGINE MOUNT (ONE)	EFG		EXHAUST FLANGE GASKET
EBCRE	RR	EMERGENCY BRAKE CABLE(BOTH REAR)	EMR	RR	ENGINE MOUNT (REAR)	EGR		EXHAUST GAS RECIRCULATION VALVE
EBCE	RR	EMERGENCY BRAKE CABLE(FRONT)	EMA	RR	ENGINE MOUNTS (ALL)	EH		EXHAUST HANGER

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
EHCS	RR	EXHAUST HEAT CONTROL SOLENOID	FL		FLASHER	FAL	RR	FRONT AIR LEVELING VALVE
EM		EXHAUST MANIFOLD	FCDF	RR	FLEX COUPLING-STEERING DAMPER	FAS		FRONT AIR SPRING
EMG		EXHAUST MANIFOLD GASKET	FCH	RR	FLEXIBLE CLUTCH HOSE	FASL	RR	FRONT AIR SPRING (LEAF)
EMGS		EXHAUST MANIFOLD GASKET SET	FLT	RR	FLOAT	FASB	RR	FRONT AIR SPRING BAG
EMHV	RR	EXHAUST MANIFOLD HEAT VALVE	FLF1	CA	FLOAT LEVEL	FASBP	RR	FRONT AIR SPRING BAG PAD
EMO	RR	EXHAUST MANIFOLD OR GSKT (ONE)	FLOW	RR	FLOWMETER	FASBF	RR	FRONT AIR SPRING BUSHING
EMOG	RR	EXHAUST MANIFOLDS OR GSKT (BOTH)	FDT	RR	FLUID DISTRIBUTION TEE	FASSF12	RR	FRONT AIR SPRING SHACKLE
EP		EXHAUST PIPE	FASF		FLUSH A-C SYSTEM	FASSF123	RR	FRONT AIR SPRING SPACER
ES		EXHAUST STUD	FASSF1		FLUSH AIR SUPPLY SYSTEM	FASU2	RR	FRONT AIR SPRING U-BOLTS (2)
ESN		EXHAUST STUD NUT	FBS		FLUSH BRAKE SYSTEM	FASF1	RR	FRONT AIR SPRINGS
ESH	RR	EXHAUST SYSTEM HANGER	FGSF		FLUSH COOLING SYSTEM	FA		FRONT AXLE
EV		EXHAUST VALVE	FEC		FLUSH ENGINE (CHEMICAL FLUSH)	FAI	RR	FRONT AXLE (I-BEAM TYPE)
EXB		EXPANSION BLOCK	FSTT	RR	FLUSH SYSTEM & THERMOSTAT	FAAS	RR	FRONT AXLE ASSEMBLY
ET		EXPANSION TUBE	FLY		FLYWHEEL	FAAF1	RR	FRONT AXLE ASSEMBY
ETF	RR	EXPANSION TUBE & FLUSH SYSTEM	FAF	RR	FLYWHEEL (AUTOMATIC)	FAC		FRONT AXLE CARRIER
EXV		EXPANSION VALVE	FMF1	RR	FLYWHEEL (MANUAL)	FAC4	RR	FRONT AXLE CARRIER 4WD
EPF	RR	EXST PIPE FLANGE (DONUT) GASKET	FOGL		FOG LAMP	FACF	RR	FRONT AXLE COVER
EXH	RR	EXTENSION HOUSING	FLF	RI	FOG LAMPS	FAE	RR	FRONT AXLE ENGAGEMENT SWITCH
EBE	RR	EXTERIOR BULB	FUS		FREE UP SELF ADJUSTERS (BOTH)	FAH	RR	FRONT AXLE HOUSING
FET		FAILED EMISSION TEST	FWHA	RR	FREE WHEELING HUB ASSEMBLY	IBB		FRONT AXLE I-BEAM
FB	RR	FAN BELT	FRZ		FREEZE PLUG	FAP	RR	FRONT AXLE PIVOT BUSHINGS
FBLD		FAN BLADE	FPO	RR	FREEZE PLUG (ONE)	FASS		FRONT AXLE SEAL
FC	RR	FAN CLUTCH	FRD		FREON DYE	FASF12	RR	FRONT AXLE SEAT
FCOO	RR	FAN CLUTCH & OVERHAUL	FO		FREON OIL	FAXS		FRONT AXLE SHAFT
FM		FAN MOTOR	FCBF	RR	FRNT CAMSHAFT-CHAMBER BRACKET	FASU	RR	FRONT AXLE SHAFT & U-JOINT
FR		FAN RELAY	FAA	RR	FRONT ACTUATOR ASSY	FASSF	RR	FRONT AXLE SHAFT SEAL
FSH	RR	FAN SHROUD	FACF1	RR	FRONT AIR CHAMBER	FASH	RR	FRONT AXLE SPRING HANGER
FS		FAN SWITCH	FACC	RR	FRONT AIR CHAMBER (CAM)	FAV	RR	FRONT AXLE VACUUM MOTOR
FBCS	RR	FEEDBACK CONTROL SOLENOID	FACW	RR	FRONT AIR CHAMBER (WEDGE)	TFB	RR	FRONT BEARING

LEYEND: RR = REMOVE/REPLACE
 RP = REPAIR
 CA = CHECK/ADJUST

RI = REMOVE/INSTALL OV = OVERHAUL
 AL = ALIGN AI = ACCESS/INSPECT
 PR = PAINTLESS/REPAIR

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "FRONT" THRU "HARD"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
FBCF	RR	FRONT BRAKE CAMSHAFT	FDF	RR	FRONT DRUM	FSAF	RR	FRONT SLACK ADJUSTER
FBD	RR	FRONT BRAKE DUST SHIELD	FEM		FRONT ENGINE MOUNT	FSAC	RR	FRONT SLACK ADJUSTER CAMSHAFT
FBSF	RR	FRONT BRAKE SHOES	DOGB		FRONT ENGINE MOUNT (DOG BONE)	FSF12	RR	FRONT SPACER
FCOF	RR	FRONT CALIPER (ONE)	FEP	RR	FRONT EXHAUST PIPE	FSF	RR	FRONT SPIDER
FCAF	RR	FRONT CALIPER ASSEMBLY	FEY	RR	FRONT EXHAUST Y PIPE	FSPR		FRONT SPRING
FCB	RR	FRONT CALIPERS (BOTH)	FHS	RR	FRONT HEIGHT SENSOR	FSTF	RR	FRONT SPRING (TRANSVERSE)
FCAO	RR	FRONT CALIPERS AND OVERHAUL	FHF	RR	FRONT HOSES	FSBF	RR	FRONT SPRING BUSHING
FCBF1	RR	FRONT CAMSHAFT BUSHINGS	FHUB		FRONT HUB	FSHF	RR	FRONT SPRING HANGER
FCSB	RR	FRONT COIL SPRINGS (BOTH)	FHO	RR	FRONT HUB OR BEARING(ONE)	FSA		FRONT STRUT ASSEMBLY
FCGS		FRONT COVER GASKET SET	FLSE	RR	FRONT LEAF SPRING (EACH)	FSAO	RR	FRONT STRUT ASSY (ONE)
FDLA	RR	FRONT DIFF LOCK ACTUATOR	FLSO	RR	FRONT LEAF SPRING (ONE)	FSAB	RR	FRONT STRUT ASSYS (BOTH)
FDLC	RR	FRONT DIFF LOCKING CABLE	FLSC	RR	FRONT LEAF SPRING CENTER BOLT	FSSC		FRONT STRUT CARTRIDGE
FDPB	RR	FRONT DIFF PINION BEARINGS	FLSBF	RR	FRONT LEAF SPRING SHACKLE	FSCB	RR	FRONT STRUT CARTRIDGES (BOTH)
FDO	RR	FRONT DIFFERENTIAL & OVERHAUL	FLOH	RR	FRONT LOCK OUT HUB	FSB	RR	FRONT SWAY BAR
FDFC	RR	FRONT DIFFERENTIAL CARRIER	FOS	RR	FRONT OUTPUT SHAFT BEARING	FSBB		FRONT SWAY BAR BUSHINGS
FDC	RR	FRONT DIFFERENTIAL CASE	FOSO	RR	FRONT OUTPUT SHAFT OIL SEAL	FTDF	RR	FRONT TANDEM DIFFERENTIAL
FDG	RR	FRONT DIFFERENTIAL GASKET	FPCO	RR	FRONT PAD CLIP OR SPRING	FTT	RR	FRONT TANDEM THROUGH SEALS
FDP	RR	FRONT DIFFERENTIAL PINION SEAL	FPWS	RR	FRONT POWER WINDOW SWITCH	FTPF	RR	FRONT TORQUE PLATE
FDCA		FRONT DIFFERENTIAL CARRIER	FPF	RR	FRONT PUMP	FTP		FRONT TRANSMISSION PUMP
FDBP		FRONT DISC BRAKE PADS	FR1	RR	FRONT ROTOR (1 - BOLT ON TYPE)	FTS		FRONT TRANSMISSION OIL SEAL
FDP	RR	FRONT DISC PADS	FRO	RR	FRONT ROTOR (ONE)	FWBO	RR	FRONT WHEEL BEARING (ONE SIDE)
FDP	RR	FRONT DISC PADS & REPLACE ROTORS	FRB	RR	FRONT ROTORS (BOTH)	FWBW	RR	FRONT WHEEL BEARING W SEAL
FDP	RR	FRONT DISC PADS & TURN ROTORS	FSE		FRONT SEAT	FWB	CA	FRONT WHEEL BEARINGS (BOTH)
FDH	RR	FRONT DOOR HANDLE	FST		FRONT SEAT TRACK	FWBS	RR	FRONT WHEEL BEARINGS(BOTH SIDES)
FDIH	RR	FRONT DOOR INSIDE HANDLE	FSF1	RR	FRONT SHACKLE	FWC	RR	FRONT WHEEL CYLINDERS(BOTH)
FDIL		FRONT DOOR INSIDE LATCH	FSABF	RR	FRONT SHOCK ABSORBERS (BOTH)	FWHD	RR	FRONT WHEEL HUB & DRUM
FDLSF	RR	FRONT DOOR LOCK SOLENOID	FSL	RR	FRONT SHOES & LINING	FWHR	RR	FRONT WHEEL HUB & ROTOR
FDLS	RR	FRONT DOOR LOCK SWITCH	FSR	RR	FRONT SHOES & RESURFACE DRUMS	FWS	RR	FRONT WHEEL SEALS (BOTH)
FDS	RR	FRONT DRIVE SHAFT	FSW	RR	FRONT SHOES W AIR BRAKES	FWM	RR	FRONT WINDOW MOTOR

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
FWR	RR	FRONT WINDOW REGULATOR	FPRC		FUEL PRESSURE REG-CALIBRATOR	GC		GAS CAP
FWT	RR	FRONT WINDOW TRANSMISSION	FPRG	RR	FUEL PRESSURE REGULATOR	GTDC	RR	GAS TANK DOOR CABLE
FPC	RR	FRT PADS-OH CALIPERS-TRN ROTORS	FP	RR	FUEL PUMP	GTDL	RR	GAS TANK DOOR LATCH
FPCR	RR	FRT PADS-R&R CALIPERS-TRN ROTORS	FPA	RR	FUEL PUMP (AUXILIARY)	G		GASKET
FPB	RR	FRZ PLUGS (BLOCK,EXCEPT REAR)	FPR	RR	FUEL PUMP RELAY	GK		GASKET KIT
FCA		FUEL CHARGING ASSEMBLY	FSOS	RR	FUEL PUMP SHUT OFF SOLENOID	GS		GASKET SEALER
FCW	RR	FUEL CHARGING WIRING ASSY	FSSW	RR	FUEL PUMP SHUT OFF SWITCH	GA		GAUGE
FCOM		FUEL COMPUTER	FRL	RR	FUEL RAIL	GL		GEAR LUBE (PER LB.)
FCD	RR	FUEL COMPUTER (DASH UNIT)	FUR		FUEL REGULATOR	GR	RR	GEARSHIFT ROD
FD		FUEL DISTRIBUTOR	FRH	RR	FUEL RETURN HOSE	GP		GLOW PLUG
FDM	RR	FUEL DISTRIBUTOR MANIFOLD	FROV	RR	FUEL RETURN OVERRUN VALVE	GPC	RR	GLOW PLUG CONTROLLER
FEV	RR	FUEL ENRICHMENT VALVE	FSC		FUEL SYSTEM CLEANER	GPCR	RR	GLOW PLUG CONTROLLER & RELAY
FF	RR	FUEL FILTER	FT	RR	FUEL TANK	GPM	RR	GLOW PLUG MODULE
FFA	RR	FUEL FILTER (AUXILIARY)	FTD	RR	FUEL TANK (DUAL BOTH)	GPR	RR	GLOW PLUG RELAY
FHC		FUEL FILTER HOSE CLAMP	FTFD	RR	FUEL TANK (FRONT DUAL)	GPT		GLOW PLUG TIMER
FG		FUEL GAUGE	FTR	RR	FUEL TANK (REAR DUAL)	GPTT	RR	GLOW PLUGS & TIMER
FGD	RR	FUEL GAUGE (DASH)	FTB		FUEL TANK BREATHER	GOV	RR	GOVERNOR ASSY
FGS	RR	FUEL GAUGE SENDER	FTFH		FUEL TANK FILLER HOSE	GOVG	RR	GOVERNOR GEAR
FH	RR	FUEL HOSE (PER FT.)	FTPS	RR	FUEL TANK PRESSURE SENSOR	GF		GREASE FITTING
FIA	CA	FUEL INJECTION ASSEMBLY	FTPT	RR	FUEL TANK PROTECTOR PLATE	GCS		GRIND CAMBER SLOTS (FRONT)
FIL		FUEL INJECTION LINE	FTSU		FUEL TANK PROTECTOR UNIT	GCSR		GRIND CAMBER SLOTS (REAR)
FILA	RR	FUEL INJECTION LINES (ALL)	FTSV	RR	FUEL TANK SPLITTER VALVE	GCSG	RR	GRIND CAMBER-CASTER SLOTS
FIM	RR	FUEL INJECTION MODULE	FTSS	RR	FUEL TANK SPLITTER VALVE SWITCH	GCSF		GRIND CASTER SLOTS (FRONT)
FIWH		FUEL INJECTION WIRING HARNESS	FAAF	RR	FUEL,WATER & AIR FILTERS	GCW		GRIND CASTER-CAMBER WELDS
FI	RR	FUEL INJECTOR	FCS		FULL CONTACT SHIM	GV		GRIND VALVES & SEATS
FUEL	RR	FUEL LINE	FCSR	RI	FULL CONTACT SHIM (REAR)	HESH	RR	HALL EFFECT SWITCH
FMF	RR	FUEL MANIFOLD	F		FUSE	HES		HALL-EFFECT SWITCH
FMA		FUEL METER ASSEMBLY	FUB	RR	FUSE BOX	HAL		HALOGEN SEALED BEAM
FMAF	RR	FUEL METER ASSY	FUL	RR	FUSIBLE LINK	HSEEC		HARD STARTING - ENGINE COLD

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTESS/REPAIR

OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "HARD" THRU "LOW"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
HSEE		HARD STARTING - ENGINE WARM	HCV	RR	HEATER CONTROL VALVE	HLSS		HOOD LIFT SUPPORT SHOCK
HOT	RR	HAZARD OR TURN SIGNAL FLASHER	HCVH	RR	HEATER CONTROL VALVE(REAR)	HLSSH	RR	HOOD LIFT SUPPORT SHOCKS
HWS	RR	HAZARD WARNING SWITCH	HTC	RR	HEATER CORE	HRC	RR	HOOD RELEASE CABLE
HWD		HAZARDOUS WASTE DISPOSAL	HCH	RR	HEATER CORE(REAR)	H		HORN ASSEMBLY
HG		HEAD GASKET	HD	RR	HEATER DOOR	HAH	RR	HORN ASSY
HGK		HEAD GASKET KIT	HH		HEATER HOSE (PER FT.)	HORC	RR	HORN CONTACT
HGOC	RR	HEAD GASKET OR CYL HEAD (ONE)	HHC		HEATER HOSE CLAMP	HFL	RR	HORN FUSIBLE LINK WIRE
HGS		HEAD GASKET SET	HHH	RR	HEATER HOSE(ONE)	HR	RR	HORN RELAY
HGO	RR	HEAD GASKETS OR CYL HEADS	HHH1	RR	HEATER HOSES(BOTH)	HS		HORN SWITCH
HAS		HEADLIGHT ADJUSTMENT SCREW	HHH	RR	HEATER HOSES(REAR HEATER)	HOSE		HOSE
HLA	RR	HEADLIGHT ASSEMBLY	HIN		HEATER IS NOT WORKING	HC		HOSE CLAMP
HBH1	RR	HEADLIGHT BULB	HTR	RR	HEATER TUBES (REAR)	HIC	RR	HOT IDLE COMPENSATOR
HCR	RR	HEADLIGHT CLOSURE RELAY	HSEN	CA	HEIGHT SENSOR	HB		HUB BEARING
HDS	RR	HEADLIGHT DIMMER SWITCH	HELI	RI	HELICOIL	HBB	RR	HYDRAULIC BOOSTER BRACKET
HDM	RR	HEADLIGHT DOOR MOTOR	HBE	RR	HENDRICKSON BEAM END BUSHINGS	HPVP	RR	HYDRAULIC BY-PASS VALVE
HLM		HEADLIGHT MOTOR	HCB	RR	HENDRICKSON CENTER BUSHINGS	HCYL	RR	HYDRAULIC CYLINDER
HLS	RR	HEADLIGHT SWITCH	HEB	RR	HENDRICKSON EQUALIZER BEAM	HF		HYDRAULIC FLUID
HBH	RR	HEADLIGHT(SEALED BEAM)	HEBH	RR	HENDRICKSON EQUALIZER BUSHINGS	HLH	RR	HYDRAULIC LINES
H2	CA	HEADLIGHTS (2)	HLI	RR	HENDRICKSON LOAD INSLT BUSHINGS	HSP	RR	HYDRAULIC SUPPORT PLATE
H4	CA	HEADLIGHTS (4)	HRS	RR	HENDRICKSON REAR SPRING	HBCV		HYDROBOOST CHECK VALVE
HAW		HEADLIGHTS AREN'T WORKING	HBR	RR	HIGH BLOWER RELAY	HBU	RR	HYDROBOOST UNIT
HEAD	RR	HEADREST	HPL	RR	HIGH PRESSURE LINE	IACS	RR	IDLE AIR CONTROL SOLENOID
HRV		HEAT RISER VALVE	HPO	RR	HIGH PRESSURE OIL INJECTION PUMP	IACV	RR	IDLE AIR CONTROL VALVE
HADD		HEATED AIR DOOR ASSEMBLY	HVGL		HIGH VELOCITY GREASE - LUBE	ICI	RR	IDLE CONTROL
HADDH	RR	HEATED AIR DOOR DIAPHRAGM	HRSH	RR	HIGH-LOW RANGE SYNCHRONIZER	ILC	RR	IDLE LOAD COMPENSATOR
HADS	RR	HEATED AIR DOOR SENSOR	HLRS		HIGH-LOW RANGE SYNCHRONIZER	ISCA	CA	IDLE SPEED CONTROL ACTUATOR
HBPT	RR	HEATER BY PASS TUBE	HCH1		HONE CYLINDERS	IDSM		IDLE SPEED CONTROL MOTOR
HCA		HEATER CONTROL ASSEMBLY	HOL	RR	HOOD LATCH	ISS	RR	IDLE STOP SOLENOID
HCC	RR	HEATER CONTROL CABLE	HOLR	RR	HOOD LATCH RELEASE	ISW	RR	IDLE SWITCH

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
ISAI	RR	IDLER (STEERING) ARM	ISST	RR	INJECTORS & SET TO SPECS	KFA	RR	K-FRAME ASSEMBLY
IA		IDLER ARM	ICBK		INNER CV BOOT KIT	KDS	RR	KICKDOWN SOLENOID
IAB		IDLER ARM BUSHING	ISSB	RR	INNER SHAFT SUPPORT BEARING	KP		KING PIN
IDLP	RR	IDLER PULLEY	ITRE		INNER TIE ROD END	KPB		KING PIN BUSHING
IPB	RR	IDLER PULLEY BRACKET	IO	RR	INPUT OUTPUT SENSOR	KPBS		KING PIN BUSHING SET
ISA	RR	IGN SWITCH ACTUATOR(WISHBONE)	IC11	RR	INSTRUMENT CLUSTER	KPS		KING PIN SET
ICAP	RR	IGNITION CAPACITOR	IPWI	RR	INSTRUMENT PANEL WIRING	KPO	RR	KING PINS OR BUSHINGS(BOTH)
ICO	RR	IGNITION COIL	IVR	RR	INSTRUMENT VOLTAGE REGULATOR	KNS	RR	KNOCK SENSOR
ICOP	RR	IGNITION COIL PACK	IM		INTAKE MANIFOLD	LL		LATERAL LINK
IC		IGNITION CONDENSOR	IMC	RR	INTAKE MANIFOLD CHAMBER	LLF	RR	LATERAL LINK (FRONT)
II	RR	IGNITION IGNITOR	IMG		INTAKE MANIFOLD GASKET	LLR	RR	LATERAL LINK (REAR)
ILCY	RR	IGNITION LOCK CYLINDER	IMO	RR	INTAKE MANIFOLD OR GASKET	LCS		LEAK CHECK SYSTEM
IGM		IGNITION MODULE	IMP	RR	INTAKE MANIFOLD PLENUM	MML		LEFT ENGINE MOUNT
IR	RR	IGNITION RELUCTOR	IMR	RR	INTAKE MANIFOLD RUNNER CNTRL	LRWC		LEFT REAR WHEEL CYLINDER
IS	RR	IGNITION SWITCH	IV		INTAKE VALVE	LCPR	RR	LEVEL CONTROL PRESSURE RESERVOIR
IT	RR	IGNITION TRIGGER	IAS	RR	INTENSIFIER AIR SUPPLY ELBOW	LCV	RR	LEVEL CONTROL VALVE
I		IGNITOR	IBA	RR	INTENSIFIER BRAKE ASSEMBLY	LB		LIGHT BULB
INDM		INDUCTION MANIFOLD	INTC	RR	INTERCOOLER	L		LINKAGE
INMG		INDUCTION MANIFOLD GASKET	IEP	RR	INTERMEDIATE EXHAUST PIPE	LNB		LINKAGE BUSHING
IACI		INFORMATION ACCESS CHARGE	IWR		INTERMITTENT WIPER RELAY	LC		LOCK CYLINDER
IRI		INFORMATION RETRIEVAL	IWRI	RR	INTERMITTENT WIPER RELAY	LLN		LOCKABLE LUG NUT
INJP	RR	INJECTION PUMP	IP		INTRUMENT PANEL	SERV		LOCKING SERVO
IPI	RR	INJECTION PUMP & INJECTORS	IPWH		INTRUMENT PANEL WIRING HARNESS	SERC		LOCKING SERVO CABLE
IPDB	RR	INJECTION PUMP DRIVE BELT	I1	AI	ION 1 SERVICE	LW	RR	LOCKING WHEEL COVERS (4)
IPG		INJECTION PUMP GEAR	I2	AI	ION 2 SERVICE	LM	RR	LOGIC MODULE
IPR	RR	INJECTION PUMP RETURN LINES	JBK	RR	JACOBS BRAKE	LBT	RR	LONG BLOCK & TRANSFER PARTS
IPT	CA	INJECTION PUMP TIMING	JBA		JAKE BRAKE ASSEMBLY	LFR	RR	LOW FUEL RELAY
IPW		INJECTION WIRING	KS		KEY SWITCH	LOLS	RR	LOW OIL LEVEL SENSOR
IWH	RR	INJECTOR WIRING HARNESS	KMC	RR	KEYBOARD MESSAGE CENTER	LPHA	RR	LOW PRESS HOSE & ACCUMULATOR

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTLESS/REPAIR

OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “LOW” THRU “PAINT”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
LPHR		LOW PRESSURE A-C HOSE (REAR)	MRB		MAIN AND ROD BEARINGS	MR	RR	METERING ROD
LTS	RR	LOW TEMPERATURE SWITCH	MB		MAIN BEARING	MIC		MICROPROCESSOR
LWS	RR	LOW WATER SENSOR	MDM	RR	MAIN DIAPHRAGM	MTS	RR	MID-TEMPERATURE SWITCH
LBJ		LOWER BALL JOINT	MD		MAIN DIAPHRAM	MIR		MIRROR
LBJB	RR	LOWER BALL JOINT (BOTH)	MMJ	RR	MAIN METERING JETS	MDMM	RR	MIRROR (DOOR MOUNTED)
LBJO	RR	LOWER BALL JOINT (ONE)	MAA		MAKE AN APPOINTMENT FOR FURTHER REPAIR	MWM	RR	MIRROR (WINDOW MOUNTED)
LCABS	RR	LOWER CNTRL ARM BUSHINGS(1 SIDE)	MPS		MANIFOLD PRESSURE SENSOR	MCC	RR	MIRROR CONTROL CABLE
LCA	RR	LOWER CONTROL ARM	MTSM	RR	MANIFOLD TEMP SENSOR	MCSW	RR	MIRROR CONTROL SWITCH
LCAB		LOWER CONTROL ARM BUSHING	MTS		MANIFOLD TEMPERATURE SENSOR	MBM	RR	MITER BOX
LRH	RR	LOWER RADIATOR HOSE	ML	RR	MANUAL LINKAGE	MCS	RR	MIXTURE CONTROL SOLENOID
LSBE		LOWER SHAFT BEARING	MPOS	RR	MANUAL POSITION SENSOR	MSH	RR	MODE SELECT HARNESS
LSB		LOWER SHAFT BUSHING	MSFT		MANUAL SHAFT	MOD		MODULE
LSBL	RR	LOWER SHOCK BRACKET	MSS		MANUAL SHAFT SEAL	MM		MOTOR MOUNT
LOS	RR	LUBE OR SLIDES & NOISE CLIPS	MT		MANUAL TRANSMISSION	MF	RR	MUDFLAPS
LL1		LUBRICATION	MTB	OV	MANUAL TRANSMISSION (BENCH)	M		MUFFLER
LN		LUG NUT	MAH		MANUFACTURE A-C HOSE ASSEMBLY	MTT	RR	MUFFLER & TAIL PIPE
LNK		LUG NUT KEY	MAPS	RR	MAP SENSOR	MOM	RR	MUFFLER (ONE)
LNS		LUG NUT SET	MAFS		MASS AIR FLOW SENSOR	MCL		MUFFLER CLAMP
MDM1		MACHINE DRUM	MAFSM	RR	MASS AIR FLOW SENSOR-MAF	MTTP	RR	MUFFLER,EXHAUST & TAIL PIPE
MFR		MACHINE FRONT ROTORS (BOTH) ON VEHICLE	MC	RR	MASTER CYLINDER	MSW		MULTIFUNCTION SWITCH
MRBD		MACHINE REAR BRAKE DRUM (ONE OFF CAR)	MCA	RR	MASTER CYLINDER AND OVERHAUL	MGMC	RR	MULTIGAUGE & MESSAGE CENTER
MRBDB		MACHINE REAR BRK DRUMS (BOTH OFF CAR)	MCOK		MASTER CYLINDER OVERHAUL KIT	NS	RR	NEEDLE & SEAT
MRD		MACHINE REAR DISC ROTOR (ONE OFF CAR)	MCRC		MASTER CYLINDER RESERVOIR COVER	NBTC		NEGATIVE BATTERY CABLE
MRDR		MACHINE REAR DISC RTRS (BOTH OFF CAR)	MBS		MATCHED BELT SET	NSS	RR	NEUTRAL SAFETY SWITCH
MRR		MACHINE REAR ROTORS (BOTH) ON CAR	MGS		MATCHED GEAR SET	NE		NEW ENGINE
MRBV		MACHINE ROTOR (BOTH)OFF VEHICLE	MCU		MCU PROCESSOR MODULE	NT		NEW TIRE
MRO		MACHINE ROTOR (ONE) OFF VEHICLE	MMM	RR	MCU-PROCESSOR MODULE	NC		NO CHARGE TO CUSTOMER
MW		MACHINE WORK	MDL		MEASURE DRIVE LINE ANGLES	N		NUT
MWW		MAG WHEEL WEIGHT	MJET		METERING JET	OD	RR	ODOMETER

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
OCF		OIL CHANGE, FILTER & LUBE	ORP		OIL RETURN PIPE	PAINT027		PAINT COMPLETE LEFT SIDE
OC	RR	OIL COOLER	OS		OIL SEAL	PAINT028		PAINT COMPLETE RIGHT SIDE
OCL		OIL COOLER LINE	OT	RR	OIL TEMPERATURE SENSOR	PAINT002		PAINT FRONT BUMPER
OCLO	RR	OIL COOLER LINES	OSS	CA	OR STRIKER PLATE	PAINT010		PAINT FRONT LEFT DOOR
ODT	RR	OIL DIPSTICK TUBE	OR		O-RING	PAINT007		PAINT FRONT LEFT FENDER
OFF	RR	OIL FEED PIPE	OCBK		OUTER CV BOOT KIT	PAINT008		PAINT FRONT LEFT FENDER FLAIR
OF		OIL FILTER	OPSA		OUTPUT SHAFT ASSEMBLY	PAINT018		PAINT FRONT RIGHT DOOR
OFA	RR	OIL FILTER ADAPTER	OPSB		OUTPUT SHAFT BEARING	PAINT015		PAINT FRONT RIGHT FENDER
OFAG	RR	OIL FILTER ADAPTER GSKT OR ORING	OPSS		OUTPUT SHAFT SEAL	PAINT021		PAINT FRONT RIGHT FENDER FLAIR
OFH	RR	OIL FILTER HOUSING SEAL	ODS	RR	OVERDRIVE SOLENOID	PAINT001		PAINT GRILLE
OFL	RR	OIL FILTER LINES	O1	RR	OVERHAUL 10 SPEED TRANSMISSION	PAINT000		PAINT GRILLE FILLER
OFC	RR	OIL FLOW CHECK VALVE	O1S	RR	OVERHAUL 13 SPEED TRANSMISSION	PAINT003		PAINT HOOD
OFW	RR	OIL FUEL WATER SEPERATOR	O1ST	RR	OVERHAUL 14 SPEED TRANSMISSION	PAINT009		PAINT LEFT B-POST
OL	RR	OIL LINE	O1ST0	RR	OVERHAUL 15 SPEED TRANSMISSION	PAINT011		PAINT LEFT RUNNING BOARD
OP		OIL PAN	O1ST01	RR	OVERHAUL 16 SPEED TRANSMISSION	PAINT025		PAINT RADIATOR SUPPORT
OPG		OIL PAN GASKET	O1ST012	RR	OVERHAUL 18 SPEED TRANSMISSION	PAINT006		PAINT REAR BUMPER
OPGS		OIL PAN GASKET SET	O2	RR	OVERHAUL 20 SPEED TRANSMISSION	PAINT012		PAINT REAR LEFT DOOR
OPOG	RR	OIL PAN OR GASKET	O7	RR	OVERHAUL 7 SPEED TRANSMISSION	PAINT014		PAINT REAR LEFT FENDER
OPGA	RR	OIL PRESSURE GAUGE	O8	RR	OVERHAUL 8 SPEED TRANSMISSION	PAINT013		PAINT REAR LEFT FENDER FLAIR
OPR	RR	OIL PRESSURE REGULATOR	O9	RR	OVERHAUL 9 SPEED TRANSMISSION	PAINT020		PAINT REAR RIGHT DOOR
OPS	RR	OIL PRESSURE SENDER	OAV		OVERHAUL AUX VALVES PRECHAMBER	PAINT022		PAINT REAR RIGHT FENDER
OPSW		OIL PRESSURE SWITCH	OA	RR	OVERHAUL AUXILIARY SECTION	PAINT016		PAINT REAR RIGHT FENDER FLAIR
OPU	RR	OIL PUMP	OPSP	RR	OVERHAUL POWER STEERING PUMP	PAINT017		PAINT RIGHT B-POST
OPD	RR	OIL PUMP DRIVE	OV		VERRUN VALVE	PAINT019		PAINT RIGHT RUNNING BOARD
OPDG	RR	OIL PUMP DRIVE COVER GASKET	OX	RR	OXYGEN SENSOR	PAINT023		PAINT RIGHT SIDE QUARTER PANEL
OPOR	RR	OIL PUMP O RING	OSO	RR	OXYGEN SENSOR(REAR)	PAINT004		PAINT ROOF
OPOS		OIL PUMP OIL SEAL	PBBC	RR	P BRAKE BRACKET(BELL CRANK)	PAINT024		PAINT TAILGATE
OPUS		OIL PUMP SEAL	PBBM	RR	P BRAKE BRACKET(CABLE MOUNT)	PAINT029		PAINT THE WHOLE VEHICLE
ORH	RR	OIL RETURN HOSE	PSI	RR	P S INPUT SHAFT SEAL	PAINT005		PAINT TRUNK

LEYEND: RR = REMOVE/REPLACE
 RP = REPAIR
 CA = CHECK/ADJUST

RI = REMOVE/INSTALL
 AL = ALIGN
 PR = PAINTLESS/REPAIR

OV = OVERHAUL
 AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "PAINT" THRU "HARD"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
PAINT026		PAINT TRUNK FLOOR	PAS	RR	PITMAN ARM SHAFT SEAL	PSPK		POWER STEERING PUMP OH KIT
PBAA	RR	PARKING BRAKE AIR ACTUATOR	PVTS		PIVOT SHAFT	PSPP	RR	POWER STEERING PUMP PULLEY
PBAV	RR	PARKING BRAKE AIR VALVE	PBP1		PLASTIGAUGE BEARINGS	PSPR	RR	POWER STEERING PUMP RESERVOIR
PBAP	RR	PARKING BRAKE ASSEMBY	PLEM	RR	PLENUM	PSRP		POWER STEERING RACK & PINION
PBC	RR	PARKING BRAKE CABLE	PD		PLUG DRIVER SIDE FRONT TIRE	PSRH		POWER STEERING RETURN HOSE
PBCC	RR	PARKING BRAKE CABLE CLAMP	PDS		PLUG DRIVER SIDE REAR TIRE	PTO	RR	POWER TAKE OFF
PBD	RR	PARKING BRAKE DRUM	PPSF		PLUG PASSENGER SIDE FRONT TIRE	PTOO	RR	POWER TAKE OFF & OVERHAUL
PBH	RR	PARKING BRAKE HYDRAULIC PUMP	PPSR		PLUG PASSENGER SIDE REAR TIRE	PT	RR	POWER TRANSISTOR
PBR	RR	PARKING BRAKE RELEASE CABLE	POAV	RR	POA VALVE	PWM		POWER WINDOW MOTOR
PBRH	RR	PARKING BRAKE RELEASE HANDLE	PTS		POINTS	PBA	RR	POWERMASTER BOOSTER ASSY
PBS	RR	PARKING BRAKE SHOE ASSEMBLY	PCC	RR	POINTS & CONDENSOR	PIV	RR	PRE IGNITION VALVE SENSOR
PAPA	RR	PARKING PAWL	PBTC		POSITIVE BATTERY CABLE	PAB		PRESS AXLE BEARING
PPD	RR	PARKING PAWL & DETENT ASSY	PBB	RR	POWER BRAKE BOOSTER	PK		PRESS KING PIN BUSHINGS
PADA		PARKING PAWL DETENT ASSY	PFT		POWER FLUSH TRANSMISSION	PWF		PRESS WHEEL FROM HUB
PCVH		PCV HOSE	PM	RR	POWER MODULE	PCS	RR	PRESSURE CONTROL SOLENOID
PCV	RR	PCV VALVE	PSS	RR	POWER SEAT SWITCH	PP		PRESSURE PLATE
PUSP	RR	PICK UP SENSOR	PSB	RR	POWER SEAT SWITCH	PREG	RR	PRESSURE REGULATOR VALVE
PUS		PICK-UP SENSOR	PSC	RR	POWER STEERING BELT	PRV		PRESSURE RELIEF VALVE
PIB		PILOT BEARING	PSCV	RR	POWER STEERING CONTROL UNIT	PSHA	RR	PRESSURE SIDE HOSE & ACCUMULATOR
PB		PINION BEARING	PSCO	RR	POWER STEERING CUT OFF SWITCH	PTC		PRESSURE TEST COOLING SYSTEM
PBP	RR	PINION BEARINGS	PSDC		POWER STEERING DIPSTICK CAP	PTCH		PRESSURE TEST CYL HEADS
PS		PINION SEAL	PSF		POWER STEERING FLUID	PMS		PREVENTATIVE MAINTENANCE SERVICE
PSO	RR	PINION SHAFT OIL SEAL	PSH		POWER STEERING HOSE	PC	RR	PRINTED CIRCUIT BOARD
PMT	RR	PIPE (MANIFOLD TO PAIR VALVE)	PSHP	RR	POWER STEERING HOSE (PRESSURE)	PVP	RR	PRIORITY VALVE
P		PISTON	PSHR	RR	POWER STEERING HOSE (RETURN)	PPS		PROPELLER SHAFT
PIP		PISTON PIN	PSSW		POWER STEERING PRESSURE SWITCH	PV	RR	PROPORTIONING VALVE
PA	RR	PITMAN ARM	PSP	RR	POWER STEERING PUMP	PVR	RR	PROPORTIONING VALVE (REAR)
PAA	RR	PITMAN ARM (AXLE MOUNT)	PSPB	RR	POWER STEERING PUMP BRACKET	PH	RR	PS HOSE (PIPE TO RESERVOIR)
PAFM	RR	PITMAN ARM (FRAME MOUNT)	PSPS	RR	POWER STEERING PUMP DRIVE SEAL	PHP	RR	PS HOSE (PUMP TO HYDRABOOST)

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
PPC	RR	PS PUMP CONTROL VALVE	RACW	RR	REAR AIR CHAMBER (WEDGE)	RBDS	RR	REAR BRAKE DUST SHIELD
PUL		PULLEY	RAL	RR	REAR AIR LEVELING VALVE	RBR		REAR BRAKE ROTOR
PAF	RR	PULSE AIR FEEDER	RASR1	RR	REAR AIR SHOCKS	RBRB	RR	REAR BRAKE ROTORS (BOTH)
PAV	RR	PULSE AIR VALVE	RAS		REAR AIR SPRING	RBS	RR	REAR BRAKE SPRINGS (BOTH)
PFCV		PUMP FLOW CONTROL VALVE	RASL	RR	REAR AIR SPRING (LEAF)	RBE	CA	REAR BRAKES & EMERGENCY BRAKE
PUCV	RR	PURGE CONTROL VALVE	RASB	RR	REAR AIR SPRING BAG	RCA	RR	REAR CALIPER ASSEMBLY
PR		PUSH ROD	RASBP	RR	REAR AIR SPRING BAG PAD	RCO	RR	REAR CALIPERS & OVERHAUL
QWM	RR	QUARTER WINDOW MOTOR	RASH	RR	REAR AIR SPRING HANGERS	RCB	RR	REAR CALIPERS (BOTH)
QWS	RR	QUARTER WINDOW SWITCH	RASR	RR	REAR AIR SPRINGS	RCBR	RR	REAR CAMSHAFT BUSHINGS
R12		R12 FREON	RA		REAR AXLE	RCS		REAR CAMSHAFT SEAL
R134		R134 FREON	RAAS	RR	REAR AXLE ASSEMBLY	RCBR1	RR	REAR CAMSHAFT-CHAMBER BRACKET
RAPB		RACK AND PINION BOOT	RAXB		REAR AXLE BEARING	RCSP		REAR COIL SPRINGS
KRA		RACK ASSEMBLY	RABC	RR	REAR AXLE BEARING,SEAL & CHG FLD	RCSB	RR	REAR COIL SPRINGS (BOTH)
R	RR	RADIATOR	RAB		REAR AXLE BOOT	RCJAF	RR	REAR CV JOINT AXLE(ALL FOUR)
RC		RADIATOR CAP	RAC	RR	REAR AXLE CARRIER	RCJA	RR	REAR CV JOINT AXLE(BOTH)
RDC		RADIATOR DRAIN COCK	RACO	RR	REAR AXLE CV OR BOOT(ONE SIDE)	RCJ	RR	REAR CV JOINT AXLE(ONE)
RF		RADIATOR FLUSH	RACP	RR	REAR AXLE CV PILOT SEAL	RDA	RR	REAR DIFFERENTIAL ASSEMBLY
RRC		RADIATOR RE-CORE	RAH	RR	REAR AXLE HOUSING OR ASSY	RDBP		REAR DISC BRAKE PADS
RAD	RR	RADIO	RAM	RR	REAR AXLE MOTOR	RDPR	RR	REAR DISC PADS & REPLACE ROTORS
RIN		RADIO IS NOT WORKING	RAXS	RR	REAR AXLE SHAFT	RDP	RR	REAR DISC PADS & TURN ROTORS
RARM	RR	RADIUS ARM	RAY	RR	REAR AXLE YOKE	RDH	RR	REAR DOOR HANDLE
RARB		RADIUS ARM BUSHINGS	RBP		REAR BACKING PLATE	RDI	RR	REAR DOOR INSIDE HANDLE
RABS	RR	RADIUS ARM BUSHINGS(ONE SIDE)	RBM		REAR BLOWER MOTOR	RDL		REAR DOOR LATCH
RAT		REALIGN AND TIGHTEN UP STEERING COLUMN	RBMR		REAR BLOWER MOTOR RELAY	GCW		GRIND CASTER-CAMBER WELDS
RV		REAM VALVE GUIDES (VALVES OUT)	RBMS		REAR BLOWER MOTOR SWITCH	GV		GRIND VALVES & SEATS
RAA	RR	REAR ACTUATOR ASSY	RBB	RR	REAR BRAKE BACKING PLATE	HESH	RR	HALL EFFECT SWITCH
RABR1	RR	REAR AIR BAG	RBC	RR	REAR BRAKE CAMSHAFT	HES		HALL-EFFECT SWITCH
RACR	RR	REAR AIR CHAMBER	RBDB	RR	REAR BRAKE DRUM (BOTH)	HAL		HALOGEN SEALED BEAM
RACC	RR	REAR AIR CHAMBER (CAM)	RBD	RR	REAR BRAKE DRUM (ONE)	HSEEC		HARD STARTING - ENGINE COLD

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTLESS/REPAIR

OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “REAR” THRU “SEAT”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
REM		REAR ENGINE MOUNT	RPT		REAR POLLUTION TUBE	RSA		REAR STRUT ASSY
RHC		REAR HEATER CORE	RPWS	RR	REAR POWER WINDOW SWITCH	RSABR	RR	REAR STRUT ASSY (BOTH)
RHS	RR	REAR HEIGHT SENSOR	RRA	RR	REAR RADIUS ARM	RSOA	RR	REAR STRUT ASSY (ONE)
RHSR	RR	REAR HORIZONTAL SHOCKS	RRAB	RR	REAR RADIUS ARM BUSHINGS	RSSC		REAR STRUT CARTRIDGE
RHR	RR	REAR HOSES	RSAB		REAR SHOCK ABSORBER	RSC		REAR STRUT CARTRIDGES
RL		REAR LATERAL LINK	RSBR	RR	REAR SHOCKS (BOTH)	RSCB	RR	REAR STRUT CARTRIDGES (BOTH)
FLS		REAR LEAF SPRING	RSR	RR	REAR SHOES	RSBR12	RR	REAR SWAY BAR
RLS		REAR LEAF SPRING	RSLL	RR	REAR SHOES & LINING	RTD	RR	REAR TANDEM DIFFERENTIAL
RLSE	RR	REAR LEAF SPRING (EACH)	RST	RR	REAR SHOES & TURN DRUMS	RTT	RR	REAR TANDEM THROUGH SEALS
RLSO	RR	REAR LEAF SPRING (ONE)	RSW	RR	REAR SHOES W AIR BRAKES	RTRE	RR	REAR TIE ROD END
RLST	RR	REAR LEAF SPRING (TRANSVERSE)	RSWA	RR	REAR SHOES W AIR BRK & TANDEM	RTREB	RR	REAR TIE ROD ENDS (BOTH)
FLSB	RR	REAR LEAF SPRING BUSHINGS	RSWT	RR	REAR SHOES W TANDEM AXLE	RTR1	CA	REAR TOE-IN
RLSB		REAR LEAF SPRING BUSHINGS	RSCD	RR	REAR SHOES-OH CYLS-TRN DRUMS	RTP	RR	REAR TORQUE PLATE
RLSC	RR	REAR LEAF SPRING CENTER BOLT	RSCDR	RR	REAR SHOES-R&R CYLS-TRN DRUMS	RTRO		REAR TORQUE ROD
FLSS	RR	REAR LEAF SPRING SHACKLES	RSAR	RR	REAR SLACK ADJUSTER	RTRR1	RR	REAR TORQUE RODS(BOTH)
RLSS		REAR LEAF SPRING SHACKLES	RSAC	RR	REAR SLACK ADJUSTER CAMSHAFT	RTRR	RR	REAR TORQUE RODS(ONE)
RLSSR	RR	REAR LEAF SPRING(BOTH SIDES)	RSR12	RR	REAR SPACER	RTB		REAR TRACKING BAR
RLBJ	RR	REAR LOWER BALL JOINT (BOTH)	RSBBP	RR	REAR SPIDER - BACKING PLATE	RTRB	RR	REAR TRACKING ROD BUSHINGS
RLB	RR	REAR LOWER BALL JOINT (ONE)	RSPN		REAR SPINDLE	RTA	RR	REAR TRAILING ARM
RLCAB	RR	REAR LOWER CNTRL ARM BUSHING	RSO	RR	REAR SPINDLE OR STUB AXLE	RTAB	RR	REAR TRAILING ARM BUSHINGS
RLCA		REAR LOWER CONTROL ARM	RSPR		REAR SPRING	RTS		REAR TRANSMISSION OIL SEAL
RLCAO	RR	REAR LOWER CONTROL ARM (ONE)	RSBR1	RR	REAR SPRING BUSHING	RUBJ		REAR UPPER BALL JOINT
RLCB		REAR LOWER CONTROL ARM BUSHINGS	RSH	RR	REAR SPRING HANGER (FRNT)	RUCA	RR	REAR UPPER CONTROL ARM
RS	RR	REAR MAIN OIL SEAL	RSHR	RR	REAR SPRING HANGER (REAR)	RUCB		REAR UPPER CONTROL ARM BUSHINGS
ROSR	RR	REAR OUTPUT SHAFT RETAINER BEAR	RSB	RR	REAR STABILIZER BAR	RWB		REAR WHEEL BEARING
ROSS	RR	REAR OUTPUT SHAFT SEAL	RSBB	RR	REAR STABILIZER BAR BUSHINGS	RWBB	RR	REAR WHEEL BEARING (BOTH SIDES)
ROX		REAR OXYGEN SENSOR	RSL	RR	REAR STABILIZER LINK BUSHINGS	RWBD	RR	REAR WHEEL BEARING (DISC)
RPC	RR	REAR PAD CLIP OR SPRING	RSK		REAR STEERING KNUCKLE	RWBDR	RR	REAR WHEEL BEARING (DRUM)
RPS	RR	REAR PINION SEAL	RSKO	RR	REAR STEERING KNUCKLE (ONE)	RWBOS	RR	REAR WHEEL BEARING (ONE SIDE)

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
RWBOR	RR	REAR WHEEL BEARING (ONE)	RL		RELAY	RAR		ROCKER ARM
RWBR	RR	REAR WHEEL BEARINGS & REPACK	RENG		REMANUFACTURED ENGINE	RAN		ROCKER ARM NUT
RWCB	RR	REAR WHEEL CYLINDER (BOTH)	RWBO		REPACK WHEEL BEARINGS (OFF CAR)	RAO	RR	ROCKER ARM OR NUT
RWC	RR	REAR WHEEL CYLINDER (ONE)	RPTO		REPAIR (PATCH) TIRE OFF VEHICLE	ROSA		ROCKER ARM SHAFT ASSEMBLY
RWH	RR	REAR WHEEL HUB	RPTOC		REPAIR (PLUG) TIRE ON CAR	RAST		ROCKER ARM STUD
RWHD	RR	REAR WHEEL HUB & DRUM	REB		REPAIR EMER BRAKE PEDAL ASSY	RASO	RR	ROCKER ARM SUPPORT OR STUD
RWHRR	RR	REAR WHEEL HUB & ROTOR	RWHR		REPAIR WIRING HARNESS	RAPP	RR	ROCKER ASSEMBLY & PUSH RODS
RWS		REAR WHEEL SEAL	RSG	RR	RESEAL STEERING GEAR	RMBS	RR	ROD & MAIN BEARINGS SET
RWSD	RR	REAR WHEEL SEAL (DISC)	RMR		RESET MAINTENANCE REMINDER LIGHT	RRR		ROD AND REPAIR RADIATOR
RWSDR	RR	REAR WHEEL SEAL (DRUM)	RES		RESISTOR	RB		ROD BEARING
RWSO	RR	REAR WHEEL SEAL (ONE SIDE)	RESO	RR	RESONATOR	RBI	RR	ROD BEARINGS (IN VEHICLE)
RWSS	RR	REAR WHEEL SEAL(BOTH SIDES)	RBR1		RESURFACE BLOCK	RBR12	RR	ROD BOOT
RWDS	RR	REAR WINDOW DEFOGGER SWITCH	RCH		RESURFACE CYLINDER HEADS	ROD		ROD OUT RADIATOR
RWM	RR	REAR WINDOW MOTOR	RFR		RESURFACE FLYWHEEL	RABR		ROTATE AND BALANCE
RWR	RR	REAR WINDOW REGULATOR	RCR		RETRAIN COMPUTER	RTR12		ROTATE TIRES
RWT	RR	REAR WINDOW TRANSMISSION	RAF		RETROFIT A-C FROM R12 TO R134	RTR		ROTOR
WWPR		REAR WINDSHIELD WASHER PUMP	RFS		REVERSE FLUSH SYSTEM	SGAM	RR	S GEAR-CNTRING AXLE MOUNTED
RWWM		REAR WINDSHIELD WIPER MODULE	RCM	RR	RIDE CNTRL MODULE (BCM)	SGMS	RR	S GEAR-FRAME MOUNTED(CENTER)
WWMR		REAR WINDSHIELD WIPER MOTOR	RMR		RIGHT ENGINE MOUNT	SCL		SAFETY CHECK LIGHT SYSTEM
RWWS	RR	REAR WINDSHIELD WIPER SWITCH	RRWC		RIGHT REAR WHEEL CYLINDER	SDS	RI	SAFETY DEVICE
RHH		REBORE & HONE CYLINDERS	RIP		RING & PINION	SISS	RR	SAFETY INTERLOCK SWITCH
RD		RECEIVER DRIER	RG		RING GEAR	SCOK		S-CAM OVERHAUL KIT
RLLC		RECHARGE & LEAK CHECK A-C SYSTEM	RGF	RR	RING GEAR FLYWHEEL OUT	S		SEAL
RACS		RECHARGE AIR CONDITIONER SYSTEM	RI		RINGS	HL		SEALED BEAM HEADLIGHT
RADM	RR	RECIRCULATING AIR DOOR MOTOR	RSR1		ROAD SERVICE	SBLT	RR	SEAT BELT
RRP		RECONDITION RACK & PINION	RSCF		ROAD SERVICE (CHANGE FLAT)	SBCM	RR	SEAT BELT CONTROL MODULE
REG		REGULATOR	RSJ		ROAD SERVICE (JUMP START)	SBLS	RR	SEAT BELT LIMIT SWITCH
RER	RR	REGULATOR (EXTERNAL)	RSM		ROAD SERVICE (MINOR REPAIR)	SBM	RR	SEAT BELT MOTOR
RIR	RR	REGULATOR (INTERNAL)	ROC		ROCKER	SBRS	RR	SEAT BELT RELEASE SWITCH

LEYEND: RR = REMOVE/REPLACE RI = REMOVE/INSTALL OV = OVERHAUL
 RP = REPAIR AL = ALIGN AI = ACCESS/INSPECT
 CA = CHECK/ADJUST PR = PAINTLESS/REPAIR

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "SEAT" THRU "TAG"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
SBRA	RR	SEAT BELT RETRACTOR ASSY	SLSW		SHIFT LOCK SWITCH	SOCB		SOLENOID CHECK BALL
SBWB	RR	SEAT BELT WARNING BUZZER	SR	RR	SHIFT ROD	SCS12	RR	SOLENOID CHECKBALL
SECC		SEAT CONTROL CABLE	SRB	RR	SHIFT ROD BUSHINGS	SVTP	RR	SOLE-VAC THROTTLE POSITIONER
SCCE	RR	SEAT CONTROL CABLE (ELECTRIC)	SSC	RR	SHIFT SELECTOR CABLE	SUS	RR	SOUND UNIT
SOT	RR	SEAT OR TRACK (FRONT)	SSL	RR	SHIFT SELECTOR LEVER	SCC		SPARK CONTROL COMPUTER
SEAT		SEAT SET	SST	RR	SHIFT SELECTOR TUBE	SPBR		SPARK PLUG BOOT RELEASE
SLT	RR	SEATS,FUEL LINE TO SUPPORT PLATE	SSO	RR	SHIFT SHAFT OR SEAL	SPT	RR	SPARK PLUG TUBES
SAB	RR	SELF ADJUSTERS (BOTH)	SDC	RR	SHIFTER DETENT CABLE	SPW		SPARK PLUG WIRE
SLAN		SELF-LOCKING AXLE NUT	SE	RR	SHOCK (EACH)	SPWS		SPARK PLUG WIRE SET
SU		SENDING UNIT	SA		SHOCK ABSORBER	SPWS1	RR	SPARK PLUG WIRES
SDER		SENSING & DIAGNOSTIC ENERGY RESERVE	SAA	RR	SHOCKS & ALIGNMENT	SP	RR	SPARK PLUGS
SDMD		SENSING & DIAGNOSTIC MODULE	SS		SHOP SUPPLIES	SCA	RR	SPEED CONTROL ASSY
SEN		SENSOR	SHTB		SHORT BLOCK	SSS1	RR	SPEED SENSOR
SB	RR	SERPENTINE BELT	SHTT	RR	SHORT BLOCK & TRANSFER PARTS	SC	RR	SPEEDOMETER CABLE
SBT	RR	SERPENTINE BELT TENSIONER	SHDH		SHROUD HOLD DOWN HARDWARE	SCWHS	RR	SPEEDOMETER CABLE W HOUSING
SCS1		SERVICE CALL	SCG	RR	SIDE COVER GASKETS	SCWH		SPEEDOMETER CABLE W-HOUSING
SET		SET ENG TO SPECIFICATIONS AS REQ	SDL	RR	SIDE DOOR LATCH	SDG	RR	SPEEDOMETER DRIVE GEAR
SRH		SET RIDE HEIGHT	SDR	RR	SIDE DOOR ROLLER	SDVG	RR	SPEEDOMETER DRIVEN GEAR
SHC	RR	SHIFT CABLE	SDA	RR	SINGLE DRIVE AXLE	SH	RR	SPEEDOMETER HEAD
SC4	RR	SHIFT CABLE (4X4)	SLA		SLACK ADJUSTER	SPIN	RR	SPINDLE
SCH		SHIFT COLUMN HOUSING	SBMS	RR	SLEEPER BLOWER MOTOR	SPIA	RR	SPINDLE ARM
SCJ		SHIFT COLUMN JACKET	SECS	RR	SLEEPER EVAPORATOR CORE	SPRB	RR	SPRING BRAKE
SCCS	RR	SHIFT CONTROL CABLE	SHCS	RR	SLEEPER HEATER CORE	STAB		STABILIZER BAR
SCSO	RR	SHIFT CONTROL SOLENOID	SHH	RR	SLEEPER HEATER HOSES	STBB	RR	STABILIZER BAR BUSHINGS
SHS	RR	SHIFT HOUSING	SSBS	RR	SLIP SHAFT(COLUMN-MITER BOX)	SBLL		STABILIZER BAR LINK BUSHING KIT
SI		SHIFT INDICATOR	SSB	RR	SLIP SHAFT(MITER BOX-GEAR)	SBLK		STABILIZER BAR LINK BUSHING KIT
SIC	RR	SHIFT INDICATOR CABLE	SF		SOCK FILTER	SLB	RR	STABILIZER LINK BUSHINGS
SLSO		SHIFT LOCK SOLENOID	SOL		SOLENOID	SOS	RR	STABILIZER OR SWAY BAR (FRONT)
SLSOS	RR	SHIFT LOCK SOLENOID OR SWITCH	SAV	RR	SOLENOID ADVANCE VALVE	SOSB	RR	STABILIZER OR SWAY BAR BUSHINGS

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
STR	RR	STARTER	SGAO	RR	STEERING GEAR AND OVERHAUL	SROB	RR	STRUT ROD OR BUSH (BOTH)
SAO	RR	STARTER AND OVERHAUL	SGA		STEERING GEAR ASSEMBLY	SRO	RR	STRUT ROD OR BUSH (ONE)
STA		STARTER ARMATURE	SGAS	RR	STEERING GEAR ASSY	STUB		STUB AXLE SHAFT
STBR		STARTER BRUSHES	SGOS		STEERING GEAR OVERHAUL SET	STUD		STUD
STBU		STARTER BUSHINGS	SGP		STEERING GEAR PLUG	SGR		SUBLET RADIATOR REPAIR
SDT		STARTER DRAW TEST	SGMS1	RR	STEERING GEAR-AXLE MOUNTED	ACDM		SUCTION & DISCHARGE MANIFOLD
SD	RR	STARTER DRIVE	SGM	RR	STEERING GEAR-FRAME MOUNTED	SRA		SUN ROOF ASSEMBLY
STRE	RR	STARTER RELAY	SK		STEERING KNUCKLE	SRAS	RR	SUN ROOF ASSY
STSO	RR	STARTER SOLENOID	SKF	RR	STEERING KNUCKLE (FRONT, ONE)	SRDH	RR	SUN ROOF DRAIN HOSE
STBE		STARTER TURNS BUT ENGINE WON'T START	SKAS	RR	STEERING KNUCKLE ARM	SRDC		SUN ROOF DRIVE CABLE
SWN		STARTER WILL NOT TURN OVER	SKA		STEERING KNUCKLE ARM	SRDCS	RR	SUN ROOF DRIVE CABLE & SLIDE
SETS		STATE EMISSION TEST	SRMS	RR	STEERING RACK (MANUAL STEERING)	SRDS		SUN ROOF DRIVE SLIDE
SIS		STATE INSPECTION	SRPS	RR	STEERING RACK (POWER STEERING)	SRMD		SUN ROOF MANUAL DRIVE ASSEMBLY
STLS		STEELS	RAP		STEERING RACK AND PINION ASSEMBLY	SRMDA	RR	SUN ROOF MANUAL DRIVE ASSY
STAR	RR	STEERING ARM	SRBO		STEERING RACK BOOT	SRM	RR	SUN ROOF MOTOR
SCS123	RR	STEERING CARTRIDGE	SRBOS	RR	STEERING RACK BOOT (ONE)	SRS	RR	SUN ROOF SWITCH
SCOL	RR	STEERING COLUMN	SRBB	RR	STEERING RACK BOOTS (BOTH)	SUCH	RR	SUPERCHARGER ASSEMBLY
SCOA	RR	STEERING COLUMN ACTUATOR	SRMB	RR	STEERING RACK MOUNTING BUSHINGS	SUCB	RR	SUPERCHARGER BELT
SCAO	RR	STEERING COLUMN AND OVERHAUL	SRPK		STEERING RACK OVERHAUL KIT	SBB		SWAY BAR BRACKET
SCAS	RR	STEERING COLUMN ASSEMBLY	SSSS		STEERING SECTOR SHAFT SEAL	SBBB		SWAY BAR BRACKET BUSHINGS
SCB		STEERING COLUMN BOOT	SSA	RR	STEERING SENSOR ASSY	SBSL1	RR	SWAY BAR LINKS
SCJS	RR	STEERING COLUMN JACKET	SSSP	RR	STEERING STABILIZER STOP	SCV	RR	SWIRL CONTROL VALVE
SCK	RR	STEERING COLUMN KEY & RACK ASSY	STW	RR	STEERING WHEEL	SW		SWITCH
SCP	RR	STEERING COLUMN POSITION SENSOR	SMA	RR	STEPPER MOTOR ACTUATOR	75W90		SYNTHETIC GEAR LUBE
SCS		STEERING COLUMN SHAFT	SL		STOP LEAK	TTS		TAB-TAD SOLENOID
STD	RR	STEERING DAMPER	RSCF		ROAD SERVICE (CHANGE FLAT)	TAGC	RR	TACH GENERATOR
RAG		STEERING FLEX COUPLER	RSJ		ROAD SERVICE (JUMP START)	TACH	RR	TACHOMETER
SG	CA	STEERING GEAR	RSM		ROAD SERVICE (MINOR REPAIR)	TST	RR	TAD-TAB SOLENOID
SGAP	RR	STEERING GEAR ADJUSTER PLUG	ROC		ROCKER	TAAT	RR	TAG AXLE ASSEMBLY

LEYEND: RR = REMOVE/REPLACE RI = REMOVE/INSTALL OV = OVERHAUL
 RP = REPAIR AL = ALIGN AI = ACCESS/INSPECT
 CA = CHECK/ADJUST PR = PAINTLESS/REPAIR

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "TAG" THRU "TRANSMISSION"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
TALM	RR	TAG AXLE LOCK MECHANISM	TS		TEMPERATURE SENSOR	T		THERMOSTAT
TALB	RR	TAG LIGHT BULB	TSW		TEMPERATURE SWITCH	TG		THERMOSTAT GASKET
TGWM	RR	TAIL GATE WINDOW MOTOR	TENC	RR	TENSION CABLE	TH		THERMOSTAT HOUSING
TGWR	RR	TAIL GATE WINDOW REGULATOR	TBRT	RR	TENSIONER (BELT REMOVED)	TOH	RR	THERMOSTAT OR HOUSING
TGWS	RR	TAIL GATE WINDOW SWITCH	TERP		TERMINAL PROTECTORS	TVS	RR	THERMOSTATIC VACUUM SENSOR
TLAT	RR	TAIL LIGHT ASSEMBLY	TBT1		TEST BATTERY	TFM	RR	THICK FILM MODULE
TLB	RR	TAIL LIGHT BULB	TBSC		TEST BATTERY STARTING & CHARGING SYS	TBLB		THIRD BRAKE LIGHT BULB
TLL	RR	TAIL LIGHT LENS	TCF		TEST COMPUTER FOR CODES	TWSV	RR	THREE WAY SOLENOID VALVE
TLAW		TAIL LIGHTS AREN'T WORKING	TD1		TEST DRIVE	THBV	RR	THROTTLE AIR BY-PASS VALVE
TP	RR	TAIL PIPE	TF5		TEST FAST START SYSTEM	TBAI	RR	THROTTLE BODY AIR INTAKE
TPE		TAIL PIPE EXTENSION	TFG		TEST FUEL GAUGE SENDING UNIT	TBG	RR	THROTTLE BODY GSKT OR SPACER
TPH		TAIL PIPE HANGER	TFP		TEST FUEL PUMP PRESSURE & VOLUME	TBI		THROTTLE BODY INJECTOR
TAT1	RR	TAILGATE ACTUATOR-MOTOR	TFT1		TEST FUSES	TBIG		THROTTLE BODY INTAKE GASKET
TLT1	RR	TAILGATE LATCH	TIM		TEST IGNITION MODULE	TBS		THROTTLE BODY SPACER
TGLC	RR	TAILGATE LOCK CYLINDER	TOPSU		TEST OIL PRESSURE SENDING UNIT	TBTS	RR	THROTTLE BODY TEMP SENSOR
TSOL	RR	TAILGATE LOCK SOLENOID	TPSP		TEST POWER STEERING PRESSURE	THCC	RR	THROTTLE CONTROL CABLE
TCTO	RR	TCS COOLANT TEMP OVERRIDE SWITCH	TSUT	RR	TEST SENDING UNIT &	TKA	RR	THROTTLE KICKER ACTUATOR
TSCS	RR	TCS SOLENOID CONTROL SWITCH	TSOS		TEST SOLENOID OR SENSOR OFF VEHICLE	TKR		THROTTLE KICKER RELAY
TCVS	RR	TCS VACUUM SOLENOID	TSST		TEST STARTING SYSTEM	TL	RR	THROTTLE LINKAGE
TDCS	RR	TDC SENSOR	TTG		TEST TEMP GAUGE SENDING UNIT	TLKB		THROTTLE LINKAGE BUSHINGS
TSD		TECHNICAL SUPPORT DIAGNOSTIC CHG	TWT		TEST WIRING	TPS	RR	THROTTLE POSITION SENSOR
TAS	RR	TEFLON AIR SUPPLY HOSE	TWG	RR	TEST WIRING & GAUGE(DASH)	TPSW	RR	THROTTLE POSITION SWITCH
TCAT	RR	TEMP CONTROL ASSY	TWF		TEST WIRING & FUSES	TRSP	RR	THROTTLE RETURN SWITCH
TGSU	RR	TEMP GAUGE (SENDING UNIT)	TABV	RR	THERMACTOR AIR BY-PASS VALVE	TOB		THROW OUT BEARING
TCA		TEMPERATURE CONTROL ASSEMBLY	TAV	RR	THERMACTOR AIR VALVE	TRE	RR	TIE ROD END
TCC	RR	TEMPERATURE CONTROL CABLE	TVSW	RR	THERMAL VACUUM SWITCH	TREI	RR	TIE ROD END (INNER)
TMPG		TEMPERATURE GAUGE	TCFS	RR	THERMO COOLANT FAN SWITCH	TREO	RR	TIE ROD END (OUTER)
TGD	RR	TEMPERATURE GAUGE (DASH)	TCTS		THERMO COOLANT TIME SWITCH	TREB	RR	TIE ROD END BUSHINGS
TSU		TEMPERATURE SENDING UNIT	THPS	RR	THERMO PURGE SWITCH	TRES		TIE ROD END SLEEVE

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
TREOS	RR	TIE ROD ENDS (OUTER-BOTH SIDES)	TCLS		TORQUE CONVERTER LOCK UP SOLENOID	TCBT	OV	TRANSFER CASE (BENCH)
TIH		TILT HOUSING	TCLST	RR	TORQUE CONVERTER LU SOLENOID	TCAT1	RR	TRANSFER CASE ASSEMBLY
TB	RR	TIMING BELT	TC		TORQUE CONVERTOR	TCE	RR	TRANSFER CASE ENCODER MOTOR
TBCG		TIMING BELT COVER GASKET	TTT	RR	TORQUE TUBE	TRGS		TRANSFER CASE GASKET SET
TBIP		TIMING BELT IDLER PULLEY	TTB		TORQUE TUBE BEARING	TCOSS	RR	TRANSFER CASE OUTPUT SHAFT SEAL
TBT	RR	TIMING BELT TENSIONER	TTT	RR	TORQUE TUBE COUPLER	TROK		TRANSFER CASE OVERHAUL KIT
TCH	RR	TIMING CHAIN	TTST	RR	TORQUE TUBE SHAFT	TCS	RR	TRANSFER CASE SEAL
TCB		TIMING CHAIN TENSIONER	TTST1		TORQUE TUBE SUPPORT	TCHT		TRANSMAGNAFLUX CYLINDER HEAD
TCT		TIMING CHAIN TENSIONER	TAAA	RR	TORSION AXLE & ARM ASSY	TRR	RR	TRANSMISSION & RESEAL(AUTOMATIC)
TCOV	RR	TIMING COVER	TORB	RR	TORSION BAR	TAO	RR	TRANSMISSION (AUTO) & OVERHAUL
TCG		TIMING COVER GASKET	TBSB	RR	TORSION BAR SUPPORT BUSHINGS	TAT	RR	TRANSMISSION (AUTOMATIC)
TCGS		TIMING COVER GASKET SET	TBSL	RR	TORSION BAR SUPPORT LINK	TMT	RR	TRANSMISSION (MANUAL)
TCOS	RR	TIMING COVER SEAL	TBB	RR	TORSION BARS (BOTH)	TCL	RR	TRANSMISSION COOLER LINES
TGT	RR	TIMING GEARS(GEAR TO GEAR)	TT12		TOWING	TFT		TRANSMISSION FILL TUBE
TMAT	RR	TIMING MARK ADJUSTER	T1		TOWING (10 OR MORE MILES)	TFTO	RR	TRANSMISSION FILL TUBE OR SEAL
TMA		TIMING MARK ADJUSTOR	T5		TOWING (5-10 MILES)	TFTS		TRANSMISSION FILL TUBE SEAL
TIPS	RR	TIMING POSITION SENSOR	TLLA		TOWING (LOCAL AREA)	TF		TRANSMISSION FILTER
TDF		TIRE DISPOSAL FEE	TBT1234		TRACK BAR	TFK		TRANSMISSION FILTER KIT
TDT		TIRE DISPOSAL TAX	TBT12	RR	TRACKING BAR	TFLK		TRANSMISSION FLUSH KIT
TPA		TIRE PATCH	TBV	RR	TRAILER BRAKE VALVE	TGS		TRANSMISSION GASKET SET
TPL		TIRE PLUG	TBT123	RR	TRAILER BRAKES	THU	RR	TRANSMISSION HYDRAULIC UNIT
TPT	CA	TIRE PRESSURE	TLS	RR	TRAILER LEAF SPRING	TRL		TRANSMISSION LINE
T2	RI	TIRES (2 WHEELS)	TL5B		TRAILER LEAF SPRING BUSHINGS	TLT	RR	TRANSMISSION LINES
T4	RI	TIRES (4 WHEELS)	TL5S		TRAILER LEAF SPRING SHACKLE	TMOD	RR	TRANSMISSION MODULATOR
T6	RI	TIRES (6 WHEELS)	TA		TRANS-AXLE	TM	RR	TRANSMISSION MOUNT
TSF	CA	TO SPEC. FOR EMISSION TEST	TAA	RR	TRANSAXLE - AUTO TRANSMISSION	TOC	RR	TRANSMISSION OIL COOLER
TT1	CA	TOE-IN	TAG		TRANS-AXLE GASKET SET	TOPS	RR	TRANSMISSION OIL PRESS SWITCH
TCSW	RR	TOP CONTROL SWITCH	RSM		ROAD SERVICE (MINOR REPAIR)	TOK		TRANSMISSION OVERHAUL KIT
TCCS	RR	TORQUE CONVERTER CLUTCH SOLENOID	ROC		ROCKER	TRP		TRANSMISSION PAN

LEYEND: RR = REMOVE/REPLACE
RP = REPAIR
CA = CHECK/ADJUST

RI = REMOVE/INSTALL
AL = ALIGN
PR = PAINTLESS/REPAIR

OV = OVERHAUL
AI = ACCESS/INSPECT

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED "TRANSMISSION" THRU "WING"

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
TPG		TRANSMISSION PAN GASKET	TBR		TURN BRAKE ROTOR	UENG		USED ENGINE
TPO	RR	TRANSMISSION PAN OR GSKT	TDR		TURN DRUMS AND ROTORS	UTI		USED TIRE
TSFT	RR	TRANSMISSION SEAL (FRONT)	TFLY		TURN FLYWHEEL	UT		USED TRANSMISSION
TSR	RR	TRANSMISSION SEAL (REAR)	TSB	RR	TURN SIGNAL BULB	VA		VACUUM ADVANCE
TSA	RR	TRANSMISSION SHIFTER ARM	TSL	RR	TURN SIGNAL LENS	VBV	RR	VACUUM BLEED VALVE
TSCG	RR	TRANSMISSION SIDE COVER GASKET	TSS		TURN SIGNAL SWITCH	VBV1	RR	VACUUM BOOSTER
TSAT	RR	TRANSMISSION SOLENOIDS (ALL)	TSSA	RR	TURN SIGNAL SWITCH ASSY	VBC	RR	VACUUM BOOSTER CHECK VALVE
TSOO	RR	TRANSMISSION(3 SPEED) & OVERHAUL	TSAW		TURN SIGNALS AREN'T WORKING	VDV	RR	VACUUM DELAY VALVE
TSOOT	RR	TRANSMISSION(4 SPEED) & OVERHAUL	UJ		U-JOINT	VDV1	RR	VACUUM DIAPHRAGM
TSOOT1	RR	TRANSMISSION(5 SPEED) & OVERHAUL	UO	RR	U-JOINT (ONE)	VD		VACUUM DIAPHRAM
TSOOT12	RR	TRANSMISSION(6 SPEED) & OVERHAUL	UTU1	RR	U-JOINTS (THREE)	VH		VACUUM HOSE (PER FT.)
TVT	RR	TREADLE VALVE	UTU	RR	U-JOINTS (TWO)	VHV	RI	VACUUM HOSES
TVP	RR	TREADLE VALVE PEDAL ASSEMBLY	UBCL		UNIVERSAL BOOT CLAMP (LARGE)	VACL		VACUUM LINE (PER FT.)
TMFC		TRIPMETER FUEL COMPUTER	UBCS		UNIVERSAL BOOT CLAMP (SMALL)	VP	RR	VACUUM PUMP
TFF	RR	TRIPMETER & FUEL COMPUTER	USMW	RR	UPP STRUT MOUNT W-BEARING (ONE)	VRS	RR	VACUUM REGULATOR SOLENOID
TST1		TROUBLE SHOOTING	UL	RR	UPPER & LOWER HOSE	VACR	RR	VACUUM RESERVOIR
TLA	RR	TRUNK LATCH	UBJ		UPPER BALL JOINT	VT		VACUUM TANK
TLST	RR	TRUNK LIFT SUPPORT SHOCKS	UBJO	RR	UPPER BALL JOINT (ONE)	VTO	RR	VACUUM TANK OR CHECK VALVE
TLC	RR	TRUNK LOCK CYLINDER	UBJR	RR	UPPER BALL JOINT (REAR)	VTC		VACUUM TEE CONNECTOR
TRC	RR	TRUNK RELEASE CABLE	UBJB	RR	UPPER BALL JOINTS (BOTH)	VTR		VACUUM TREE
TRCT		TSB RECALL CHARGES	UCA	RR	UPPER CONTROL ARM	V		VALVE
TUM		TUNE UP (MAJOR) INCLUDING ADJUSTMENTS	UCAB		UPPER CONTROL ARM BUSHING	VB	RR	VALVE BODY
TURC	RR	TURBO CONTROL CENTER	UCABU	RR	UPPER CONTROL ARM BUSHINGS	VCG		VALVE COVER GASKET
TURI	RR	TURBO INLET PIPE	UMJ	RR	UPPER MAST JACKET BEARING	VCGS		VALVE COVER GASKET SET
TURO	RR	TURBO OUTLET PIPE	UH	RR	UPPER RADIATOR HOSE	VCGV	RR	VALVE COVER GASKETS
TURB	RR	TURBOCHARGER ASSEMBLY	USB	RR	UPPER SHOCK BRACKET	VG		VALVE GUIDE
TURH	RR	TURBOCHARGER HOSE	USMB		UPPER STRUT MOUNT BEARING	VL	RR	VALVE LIFTERS
TOS	RR	TURBOCHARGER OIL SEALS	USMK		UPPER STRUT MOUNT KIT	VST		VALVE SEATS
TBD		TURN BRAKE DRUM	UCS		USE CUSTOMER SUPPLIED PARTS	VSPR		VALVE SPRING

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
VSOSV	RR	VALVE SPRING OR SEAL	VAV	RR	VOLTMETER, AMMETER	WSD	RR	WHEEL STUD (DISC)
VSOSV1	RR	VALVE SPRINGS OR SEALS(ALL)	WBEC		WARNING BEACON	WSDW	RR	WHEEL STUD (DRUM)
VS		VALVE STEM	WJ		WARRANTY JOB	WSO	RR	WHEEL STUD (ONE STUD)
VSOS		VALVE STEM OIL SEAL	WG		WASTE GATE	WSOW	RR	WHEEL STUDS (ONE WHEEL)
VSSS		VALVE STEM SEAL	WGH		WASTE GATE HOSE	WW		WHEEL WEIGHT
VIRA	CA	VALVES IN RECEIVER ASSEMBLY	WA	RR	WASTEGATE ACTUATOR	WM		WINDOW MOTOR
VE		VEHICLE ENGINE RUNS ROUGH	WHW	RR	WASTEGATE HOSE	WR		WINDOW REGULATOR
VFF	AI	VEHICLE FOR FLUID LEAKS	WCP		WATER COOLANT PIPE	REMT		WINDOW REGULATOR & MOTOR
VHAH		VEHICLE HAS A HANDLING PROBLEM	WFS		WATER FUEL SEPERATOR	WSW		WINDOW SWITCH
VHAP		VEHICLE HAS A PULSATING BRAKE PEDAL	WP	RR	WATER PUMP	WWF		WINDSHIELD WASHER FLUID
VHAR		VEHICLE HAS A RUMBLE AT ALL SPEEDS	WPA	RR	WATER PUMP (AUXILIARY)	WWNW	RR	WINDSHIELD WASHER NOZZLES
VHA		VEHICLE HAS AN EXHAUST ODOR	WPB	RR	WATER PUMP BELT	WWP	RR	WINDSHIELD WASHER PUMP
VIB		VEHICLE IS BOUNCING	WPBT	RR	WATER PUMP BELT TENSIONER	WWPRW	RR	WINDSHIELD WASHER PUMP (REAR)
VM		VEHICLE MAKES A MOANING NOISE	WPG		WATER PUMP GASKET	WWRW	RR	WINDSHIELD WASHER RESERVOIR
VMA		VEHICLE MAKES A SCREECHING SOUND	WPH	RR	WATER PUMP HOUSING	WWA	RR	WINDSHIELD WIPER ARM
VMAS		VEHICLE MAKES A SQUEALING SOUND	WPI	RR	WATER PUMP INLET	WWB		WINDSHIELD WIPER BLADE
VMAW		VEHICLE MAKES A WHINING SOUND	WPL		WATER PUMP LUBE	WWBU	RR	WINDSHIELD WIPER BUSHING
VMP		VEHICLE MAKES POPPING NOISES	WPP	RR	WATER PUMP PULLEY	WWL	RR	WINDSHIELD WIPER LINKAGE
VMR		VEHICLE MAKES RATTLING NOISES	WRW	RR	WEDGE (REAR)	WWMW	RR	WINDSHIELD WIPER MODULE
VN		VEHICLE NEEDS REPAIR WITHIN 30 DAYS	WBC	RR	WEDGE BRAKE CYLINDER	WWM	RR	WINDSHIELD WIPER MOTOR
VPL		VEHICLE PULLS LEFT	WBOK		WEDGE BRAKE OVERHAUL KIT	WWMP	RR	WINDSHIELD WIPER MOTOR & PUMP
VPR		VEHICLE PULLS RIGHT	WB		WHEEL BEARING	WWMRW	RR	WINDSHIELD WIPER MOTOR (REAR)
VSI		VEHICLE SHIMMIES IN FRONT END	WBG		WHEEL BEARING GREASE	WWN		WINDSHIELD WIPER NOZZLE
VSS		VEHICLE SPEED SENSOR	WC		WHEEL CYLINDER	WWR		WINDSHIELD WIPER REFILL
VF		VENT FILTER	WCK		WHEEL CYLINDER KIT	WWRW1	RR	WINDSHIELD WIPER REFILLS
VOS	RR	VENT OIL SEPERATOR	WCA	RR	WHEEL CYLINDERS AND OVERHAUL	WWRE		WINDSHIELD WIPER RESERVOIR
VU	RR	VIR UNIT	WS		WHEEL SEAL	WWS	RR	WINDSHIELD WIPER SWITCH
VR		VOLTAGE REGULATOR	WSS		WHEEL SPEED SENSOR	WWTG	RR	WINDSHIELD WIPER TIMER GOVERNOR
VOLT		VOLTMETER	WST		WHEEL STUD	WN		WING NUT

LEYEND: RR = REMOVE/REPLACE RI = REMOVE/INSTALL OV = OVERHAUL
 RP = REPAIR AL = ALIGN AI = ACCESS/INSPECT
 CA = CHECK/ADJUST PR = PAINTLESS/REPAIR

LIST OF LABORS CODE AND DESCRIPTIONS

LABORS LISTED “TRANSMISSION” THRU “YOUR”

CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION	CODE	OP	DESCRIPTION
WBW	RI	WIPER BLADES						
W		WIRE (PER FT.)						
WIRE		WIRE (PER FT.)						
WICO		WIRE CONNECTOR						
WIC		WIRE CONNECTOR						
WHDC		WIRE HOLD DOWN CLIPS						
WH		WIRING HARNESS						
WHC		WIRING HARNESS CONNECTOR						
WOTS	RR	WOT SWITCH						
Y		YOKE						
YD	RR	YOKE DRIVE SHAFT & U-JOINTS						
YO	RR	YOKE OUTPUT SHAFT SEAL						
YS	RR	YOKE SHAFTS & U-JOINTS (BOTH)						
YV		YOUR VEHICLE IS IN VERY GOOD CONDITION						

LEYEND: RR = REMOVE/REPLACE
 RP = REPAIR
 CA = CHECK/ADJUST

RI = REMOVE/INSTALL
 AL = ALIGN
 PR = PAINTLESS/REPAIR

OV = OVERHAUL
 AI = ACCESS/INSPECT